


PowerCool-WLL010A1 Series Operation Manual

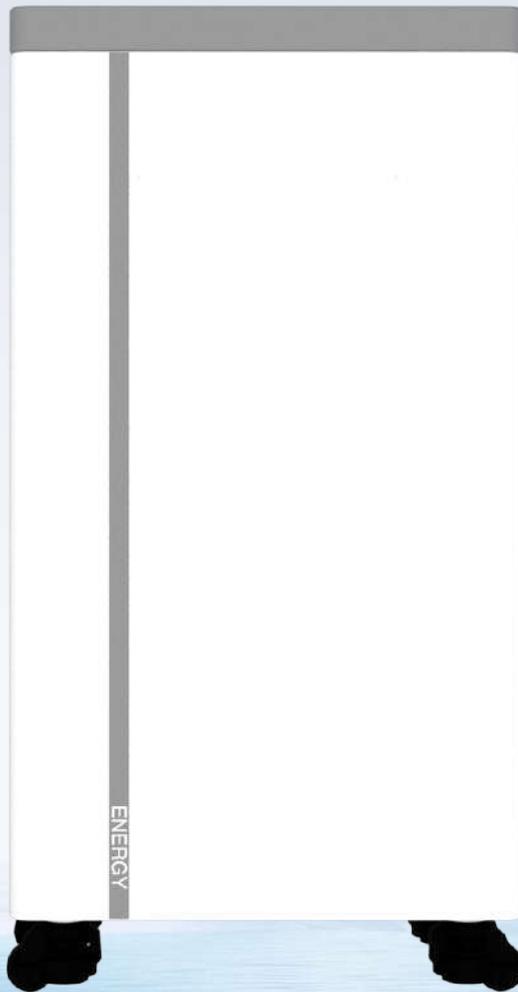

Version No: V1.0

Disclaimer

Copyright © Our Company. 2025. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Our Company.

The material furnished in this manual is believed to be accurate and reliable. The information and recommendations in this manual do not constitute commitments or warranties in the form of assignments. The information in this document is subject to change without notice.

This manual mainly describes the product information, guidelines for installation, operation, maintenance and troubleshooting. And this manual applies to the PowerCool-WLL010A1 system, including the hybrid inverter. Please keep the Manual properly and operate in strict accordance with all safety and operating instructions in this manual. Please do not operate the product before reading through the manual.

All brands and product names are trademarks or registered trademarks of their respective holders.

This Manual introduces PowerCool-WLL010A1 system and hybrid inverter manufactured by our company. Please read this manual before you install the product and follow the instructions carefully during the installation process. Our company shall not be liable for any consequences resulting from the violation of the storage, transportation, installation, and operation regulations outlined in this document. Should you have any confusion, please contact our company for advice and clarification.

CONTENTS

1. Introduction	- 4 -
1.1. Content and Structure of this Manual	- 4 -
1.2. Target Group	- 4 -
1.3. Levels of Warning Messages	- 4 -
1.4. Marks	- 5 -
1.5. Definition of Abbreviations and Nouns	- 5 -
2. Safety Instruction	- 6 -
2.1. Battery precautions	- 6 -
2.2. Emergency situation	- 7 -
3. System Introduction	- 8 -
3.1. Parameters of energy storage system	- 8 -
3.2. Product Appearance	- 10 -
3.3. Battery Interface Instruction	- 11 -
3.4. Application scenario	- 12 -
3.5. Features	- 12 -
4. Installation	- 13 -
4.1. Tools and safety gear	- 13 -
4.2. Package Items	- 14 -
4.3. Installation Locations	- 17 -
4.4. Installation Direction	- 17 -
4.5. Single Batter Installation	- 18 -
4.6. Parallel Connection	- 20 -
4.7. Definition of RJ45 Port Pin	- 26 -
4.8. Power on	- 27 -
4.9. Power off	- 28 -
4.10. Maintenance	- 28 -
5. APP configuration and commissioning	- 29 -
5.1. Download our APP	- 29 -
5.2. Login page	- 29 -
5.3. Viewing installed units and adding new units	- 32 -
5.4. Viewing details of installed devices	- 40 -
5.5. 'My' page features	- 44 -
5.6. Inverter selection	- 51 -

1. Introduction

1.1. Content and Structure of this Manual

This manual is valid for PowerCool-WLL010A1 Series Energy Storage System.

This manual describes the product information, and guidance for installation, as well as Inverter operation.

Observe all manual that accompanies the product, keep them in a convenient place and available at all times.

Illustrations in this manual are reduced to the essential information and may deviate from the real product.

1.2. Target Group

This manual is intended for qualified persons and end users. Only qualified persons are allowed to perform the operations marked with a warning symbol in this manual. Tasks that do not require any specific qualifications will not be marked and can be performed by the end user. Qualified persons must have:

- Knowledge of working principle of Li-ion battery.
- Knowledge of how to deal with the dangers and risks associated with installing and using electrical devices, batteries and systems.
- Knowledge of the installation and commissioning of electrical devices and systems.
- Knowledge of the applicable standards and directives.
- Understood and complied with this document, including all safety precautions.
- Understood and complied with the documents of the battery and inverter manufacturer, all safety precautions included.

1.3. Levels of Warning Messages



DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.




CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



NOTICE indicates a situation which, if not avoided, can result in property damage.

1.4. Marks

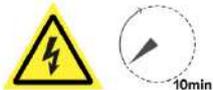	Warning electric shock.		Do not operate until 10 minutes after discharge
	Warning Fire		Read the product and operation manual before operating the battery system!
	Do not reverse connect the positive and negative		CE mark
	Do not place near open flame		Recyclable
	Do not place at the children or pet touchable area		Grounding

1.5. Definition of Abbreviations and Nouns

Abbreviation	Noun
AC	alternating current
BAT	battery
BMS	battery management system
DC	direct current
INV	inverter
PV	photovoltaic

SOC	state of charge
SOH	state of health

2. Safety Instruction

This product is designed and tested in accordance with international safety requirements set out by CE and UN38.3, but as with all electrical and electronic equipment, certain precautions must be observed when installing and operating the product. To reduce the risk of personal injury and ensure the safe installation and operation of the product, more attention should be paid on following all instructions, cautions and warnings in this Manual.

2.1. Battery precautions



WARNING

It is important and necessary to read the User Manual carefully before installing or using battery. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death, or can damage battery, potentially rendering it inoperable.

- If the battery is stored for long time, it is required to charge it every three months, and the recommended SOC should be 30%~50%.
- Battery needs to be recharged within 12 hours after being fully discharged.
- Do not have the product installed in any environment that falls outside the range of temperature or humidity set out in the Manual.
- All the power terminals must be disconnected for maintenance.
- Please contact the supplier within 24 hours in case of anything abnormal.
- Do not use cleaning solvents to clean battery.
- Do not expose battery to flammable or harsh chemicals or vapors.
- Do not paint any part of battery, include any internal or external components.
- Do not connect battery with PV solar wiring directly.
- Any foreign object is prohibited to insert into any part of battery.
- The warranty claims are excluded for direct or indirect damage due to above reasons.

2.2. Emergency situation



This product is designed with multiple safety strategies to prevent hazards resulting from failure. However, hazards and dangers could emerge in few uncertain situations.

2.2.1. Fire

The battery pack may catch fire when heated over 150°C.

Ensure dry powder extinguisher or carbon dioxide extinguisher nearby the battery, and do not use water to extinguish the fire.

If a fire breaks out where the battery is installed, perform the following actions:

- Extinguish the fire before the battery catches fire.
- If the battery has caught fire, do not try to extinguish the fire. The fired battery will produce poisonous gases, please evacuate people immediately.

2.2.2. Leaking

If the battery PACK leaks, avoid contact with the leaking liquid or gas.

Electrolyte is corrosive and contact may cause skin irritation and chemical burns. If one is exposed to the leaked substance, perform the following actions:

Inhalation: Evacuate the contaminated area and seek medical attention immediately.

Eyes contact: Rinse eyes with flowing water for 15 minutes and seek medical attention immediately.

Skin contact: Wash the affected area thoroughly with soap and water and seek medical attention immediately.

Ingestion: Induce vomiting as soon as possible and seek medical attention immediately.

2.2.3. Wet battery

If the battery is wet or submerged in water, do not try to access it. Contact customer service for technical assistance.

2.2.4. Damaged battery

Damaged battery may emit toxic gas or/and flammable gas, which could cause hazards to lives or property. If the battery is damaged, please keep away from the battery and contact customer service for help as soon as possible.

3. System Introduction


3.1. Parameters of energy storage system

Product name	Rechargeable Li-ion Battery System
Battery Module	PowerCool-WLL010A1
Total Energy (kWh)	10.49
Usable Energy (kWh)*	9.97
Voltage Range (Vd.c)	44.8~57.6
Rated capacity (Ah)	205
Nominal Voltage (V)	51.2
Charging Voltage Declared by Manufacturer (V)	57.6
Vtrip : The trip voltage of overcharge protection voltage control (V)	58
Vtrip : The trip voltage of overdischarge protection (V)	44
Nominal Charging Current (A)	100
Max. continuous charging current(A)	100
Nominal Discharge Current (A)	100
Max. continuous discharging current(A)	100
Itrip : The trip current of overcharge protection current control (A)	120
Ttrip :The trip temperature of Overheating protection (°C)	57
DOD (%)	95%
Communication Interface	CAN/RS485/Wifi
Max parallel quantity	6
Dimension(L*W*H) (mm)	(430±2)*(230±2)*(670±2)
Net Weight (kg)	(90±1)
Operating Condition	Indoor

Storage Temperature Range		-35~60°C, (It is required to conduct a full charging/discharging cycle for cell protection every 3 months)
Cell Operating Temperature	Charging	0~55 °C
	Discharging	-15~55 °C
Humidity		≤85%RH(No Condensation)
Cooling Type		Natural
IP Rating of Enclosure		IP20
Configuration		16S
Class of Protection		Class I
Installation Method		Floor-standing
Supply Connection		Fixed power cord
Authentication Level		CE/UN38.3/MSDS
Warranty		5 free warranty


*Testing conditions based on temperature 25°C at the beginning of life. Total Energy/Usable Energy are measured with a standard test method: 0.2C Charge and Discharge. As per the characteristics of lithium batteries, such parameters as the charge/discharge current and efficiency listed above are subject to change. The final right of interpretation is reserved by our company.

3.2. Product Appearance

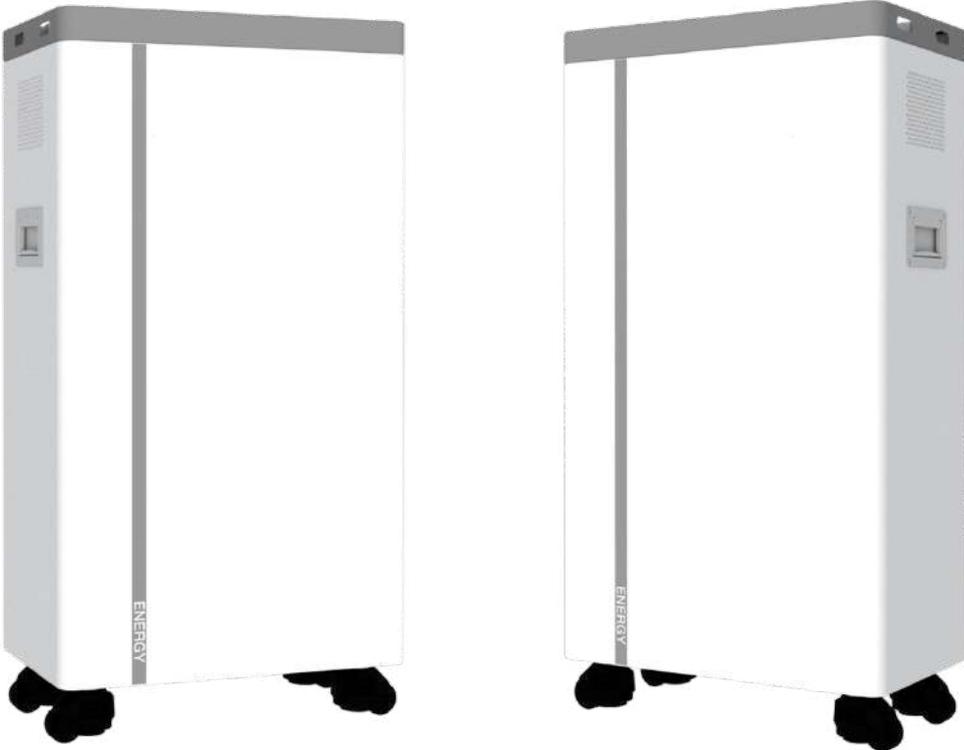

3.3. Battery Interface Instruction

All the ports and indicators are shown in the Fig. below and detailed in the following table.

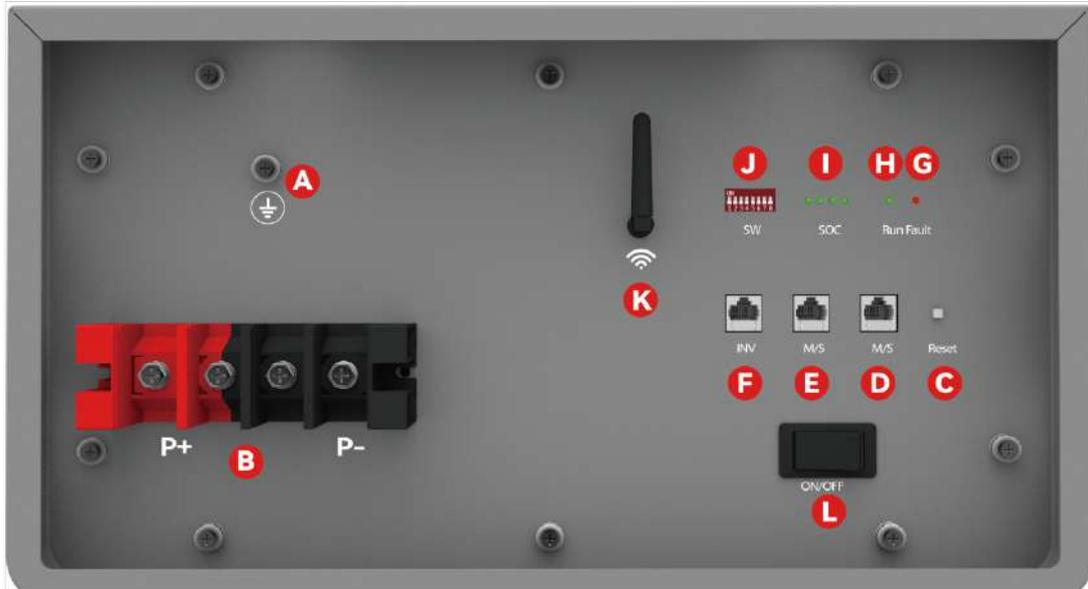


Object	Name	Description
A	GND	Grounding protection
B	P+/P-	Battery output anode
C	Reset	Reset the WIFI configuration
D	M/S	Communication ports to parallel batteries
E	M/S	Communication ports to parallel batteries
F	INV	Communication port to inverter
G	Fault ¹	Fault indicator (Red)
H	Run ²	Operation indicator (Green)
I	SOC	SOC indicator LED
J	SW	DIP switch
K	WIFI	WIFI
L	ON/OFF	The switch of the battery

1: The red light keeps flashing when fault occurs, such as overcharge, over-discharge, over-current, as well as over high/low temperature, etc.

2: The green light flashes slowly when the battery runs normally. The green light flashes quickly when turning on or off.

3.4. Application scenario

The PowerCool-WLL010A1 series energy storage system (includes inverter and battery PowerCool-WLL010A1) are designed to increase energy independence for homeowners. Energy management is based on time-of-use and demand charge rate structures, significantly reducing the amount of energy purchased from the public grid and optimizing self-consumption. The system can be applied in DC-coupled systems and Off-grid (with Generator) systems.

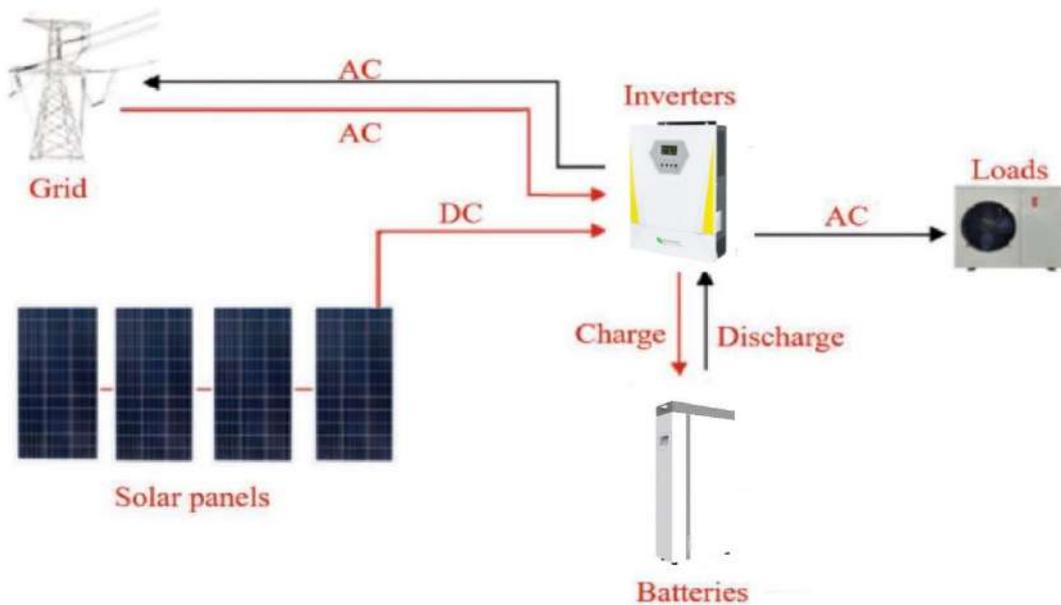

3.5. Features

- The battery is non-toxic, pollution-free and environmental-friendly.
- Anode material is made from LiFePO₄ with safety performance and long cycle life.
- BMS has protection functions including over-discharge, over-charge, over-current and high/low temperature.
- Flexible configuration, multiple battery modules can be connected in parallel to increase storage energy.

4. Installation

4.1. Tools and safety gear

The displayed tools are recommended and could be used in the installation of batteries and hybrid inverter. And the safety gear should be worn correctly during installation.

During operation, consider that the noise emitted based on the environment could possibly exceed the legal thresholds (less than 70 dBA), therefore, suitable ear protection must be worn.


 Screwdriver	 Wire cutter	 Crimping modular plier
 Voltmeter	 Pocket knife	 Insulating tape
 Insulated gloves	 Safety goggles	 Safety shoes
 Socket wrench	 Percussion drill	

4.2. Package Items

Unpacking

On receiving the products, please check to make sure the packing and all components are not missing or damaged. Please contact your dealer directly for supports if there is any damage or missing components.

a. Battery pack

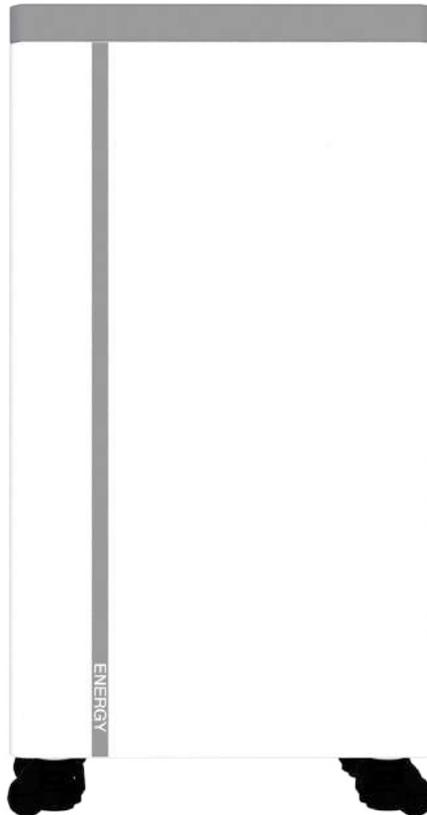

b. Power cables to inverter *2(2AWG, 1.5m) - (Optional; used to be connected Master battery to Inverter)



c. RJ45 communication cable to inverter *1 (1.5m) -(Optional; used to be connected Master battery to Inverter)



- d. Ground wire *1(4AWG, 1.5m) - (Optional; used for earthing of Master battery)**



- e. Power cable for parallel connection *2(2AWG, 1.5m) - (Optional; used only for parallel connection of battery systems)**



- f. Communication cable for parallel connection *1 (1.5m) -(Optional; used only for parallel connection of battery systems)**



- g. Earthing wire for parallel connection *1(4AWG, 1.5m) -(Optional; used only for parallel connection of battery systems)



- h. User Manual and Warranty Card

PowerCool-WLL010A1
Series Operation Manual



Version No: V1.0

Consumer Warranty

Residential Energy Storage System



Version No: 2.0

4.3. Installation Locations

Make sure that the installation location meets the following conditions:

- The area is completely waterproof;
- The floor is flat and level;
- There are no flammable or explosive materials nearby;
- The ambient temperature is within the range from 0°C to 40°C;
- The temperature and humidity are maintained at a constant level (<85% (RH) no condensed water);
- There is minimal dust and dirt in the area;
- The distance from heat source is more than 2 meters;
- The distance from air outlet of inverter is more than 0.5 meters;
- The installation areas shall avoid of direct sunlight;
- There are no mandatory ventilation requirements for battery module, but please avoid of installation in confined area. The aeration shall avoid of high salinity, humidity or temperature
- According to the on-site situation, the equipment should be fixed to the wall during installation against the wall.




CAUTION

*If the ambient temperature is out of the operating range, the battery stops operating to protect itself.
The optimal temperature for the battery pack ranges from 10°C to 40°C. Frequent exposures to harsh temperatures may deteriorate the performance and life of the batter*

4.4. Installation Direction

Recommended:

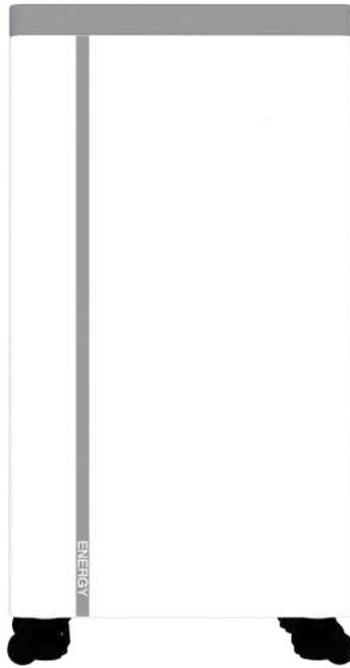

NOTICE


NOT ALLOWED	
Upside down	Sidelong

4.5. Single Batter Installation

4.5.1. Floor-standing

Step 1: Move the battery to a flat ground indoor and place it against the wall;

Step 2: Rotate anti-clockwise the regulating wheels on the bottom of the battery one by one till the foot masters fully touch the ground.

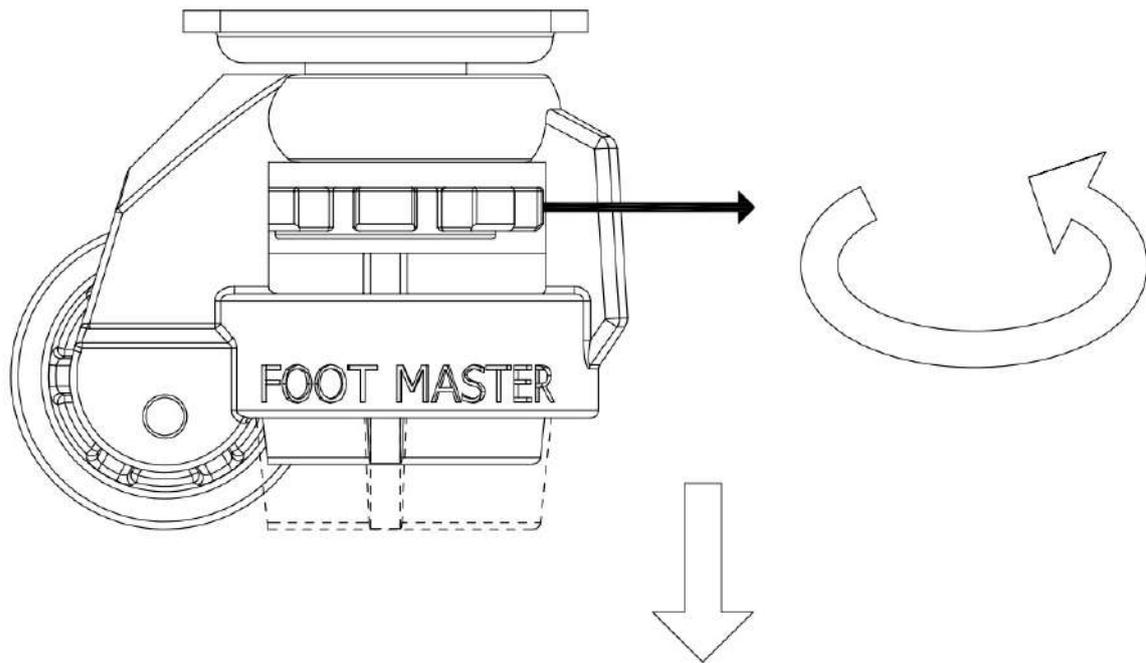

4.5.2. System Wiring

- 1) Connect the orange power cable of the batter to the corresponding port of inverter;
- 2) Connect the black power cable of the batter to the corresponding port of inverter;
- 3) Connect the communication cable from INV port to the corresponding port of inverter;
- 4) Earthing wire (4AWG) shall be connected to the ground point of each batter;



4.6. Parallel Connection

4.6.1. Floor-standing

Step 1: Please check the voltage of each batter and make sure the voltage difference is less than 2V.


Step 2: Refer to Steps 1-2 for single batter installation

Step 3: The internal distance between adjacent batteries is a recommended one and shall be reasonably reduced as much as possible.




4.6.2. System Wiring for Parallel Connection


1) Connect the communication cable to the M/S communication terminals of adjacent batteries.

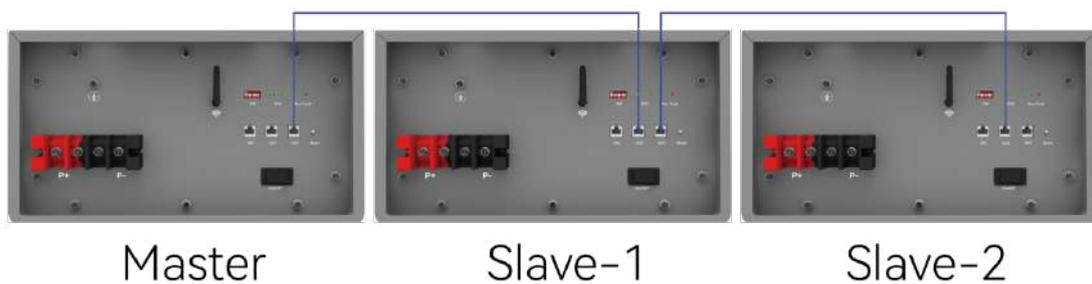


2) Connect the orange parallel connection power cables to the P+ terminals of adjacent batteries.

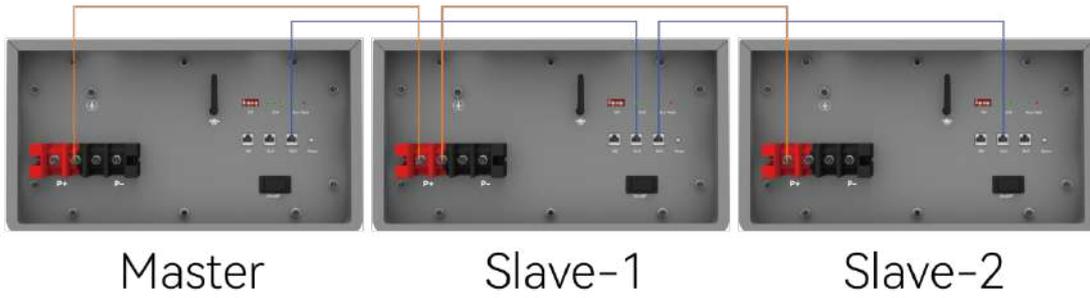


3) Connect the black parallel connection power cables to the P- terminals of adjacent batteries.

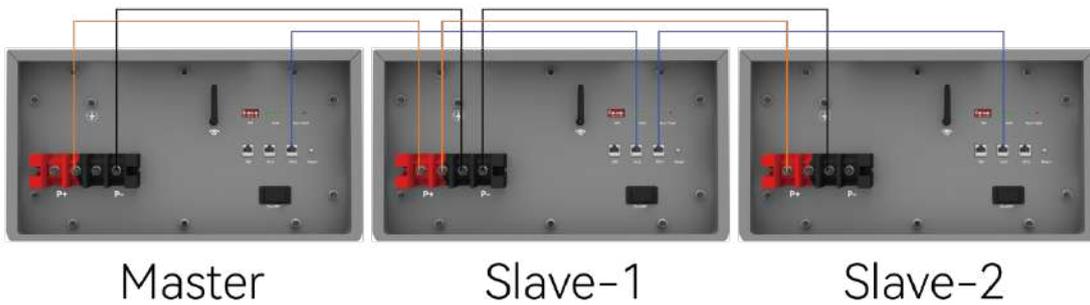

4) Connect the grounding protection points of each PACK with the yellow green grounding .

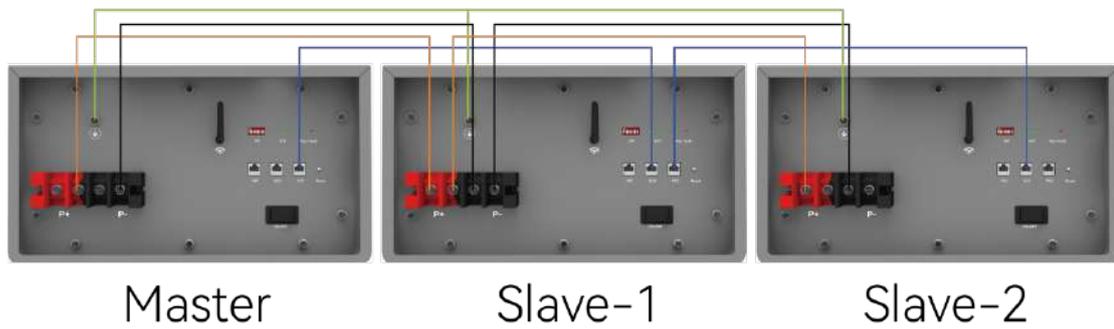

5) Select the batteries' addresses by setting the DIP 1 ~ 4 on each battery, as shown in the following Fig.

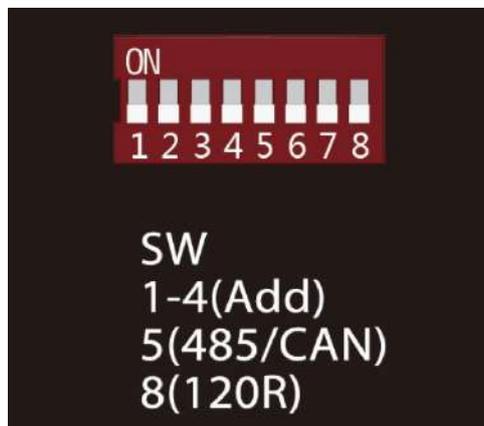

Number of Packs	Combination	DIP 1	DIP 2	DIP 3	DIP 4
1	-	ON	OFF	OFF	OFF
2	Master	ON	OFF	OFF	OFF
	Slave	OFF	ON	OFF	OFF
3	Master	ON	OFF	OFF	OFF
	Slave 1	OFF	ON	OFF	OFF
	Slave 2	ON	ON	OFF	OFF
4	Master	ON	OFF	OFF	OFF
	Slave 1	OFF	ON	OFF	OFF
	Slave 2	ON	ON	OFF	OFF
	Slave 3	OFF	OFF	ON	OFF
5	Master	ON	OFF	OFF	OFF
	Slave 1	OFF	ON	OFF	OFF
	Slave 2	ON	ON	OFF	OFF
	Slave 3	OFF	OFF	ON	OFF
	Slave 4	ON	OFF	ON	OFF
6	Master	ON	OFF	OFF	OFF
	Slave 1	OFF	ON	OFF	OFF
	Slave 2	ON	ON	OFF	OFF
	Slave 3	OFF	OFF	ON	OFF
	Slave 4	ON	OFF	ON	OFF
	Slave 5	OFF	ON	ON	OFF

6) Definitions of DIP switch 5~8

DIP5: Inverter communication switch selection: 0 represents CAN, while 1 represents RS485; the default communication mode is CAN, while the final communication


mode is subject to the communication protocol of inverter used.

DIP6: Forced charging switch: 0 represents OFF, while 1 represents ON. It is OFF by default under normal operating mode, and can only be turned ON by professional personnel or following instructions from professional personnel.


DIP7: Master communication switch: 0 represents OFF, while 1 represents ON. It is OFF by default and can only be turned ON during fault check and commissioning by professional personnel.

DIP8: CAN communication 120 resistance switch: 0 represents OFF, while 1 represents ON. Keep in ON when there is no parallel connection. Under the circumstance of parallel connection, turn DIP8 of first and last batteries ON and keep all others in-between OFF.


7) Connect the communication cable from INV port of master batter to the corresponding port of inverter.

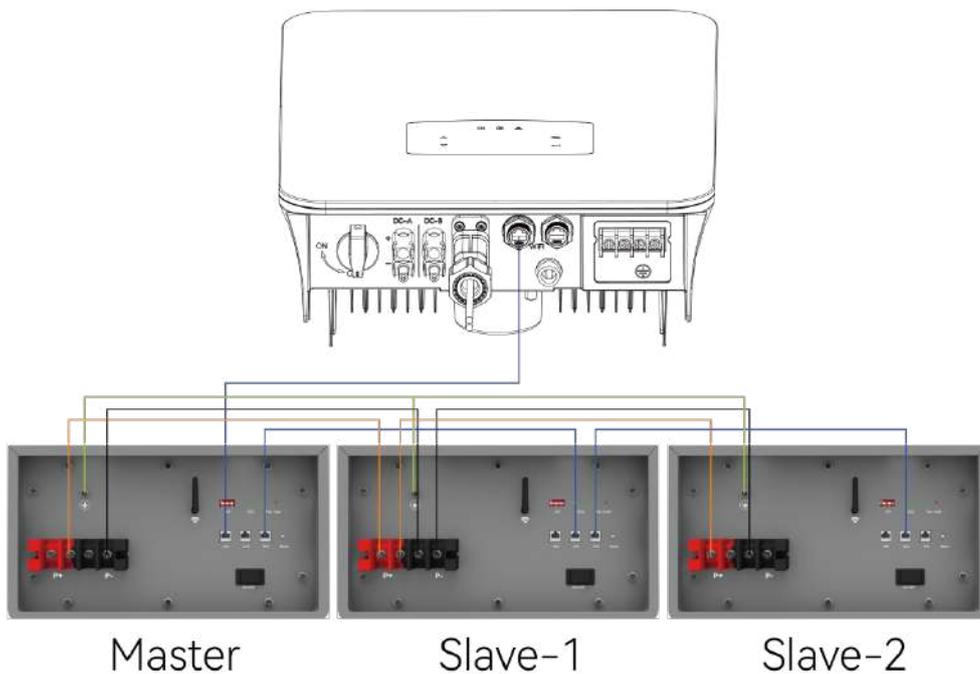

8) Connect the power cables from Positive/Negative busbars to corresponding ports of the inverter.

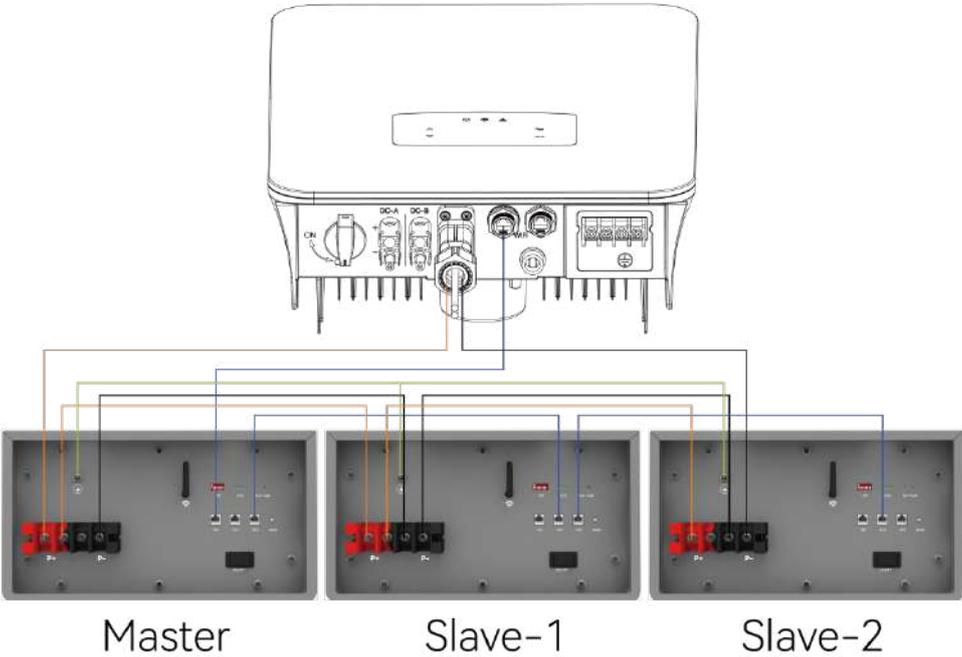

9) Connect a grounding cable to the grounding point of the batteries(4AWG).

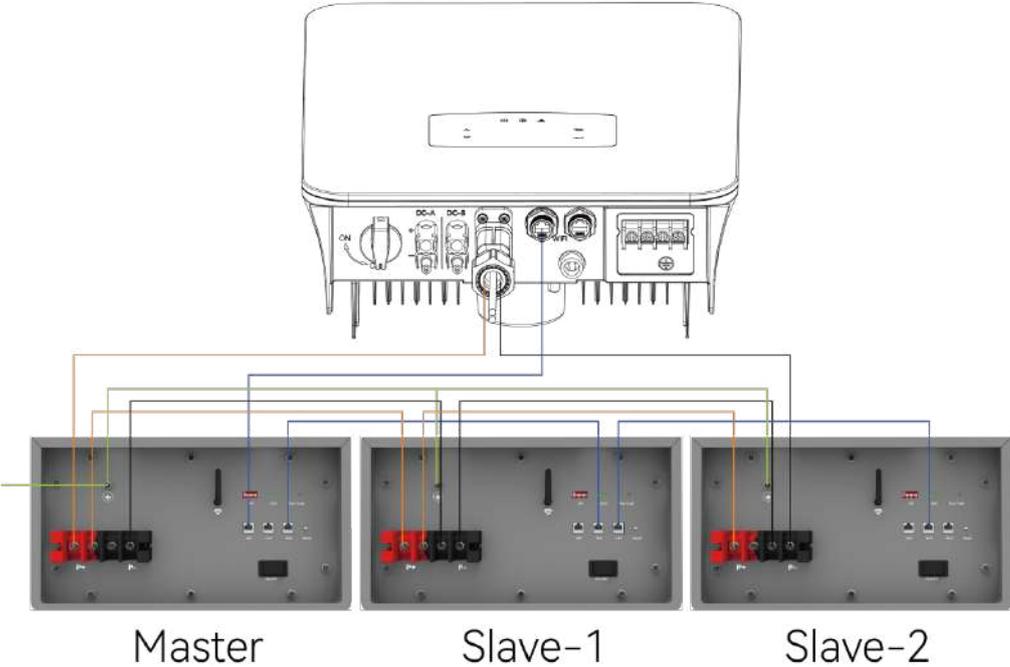




WARNING

I. For Australian market, an over-current and disconnection device that isolates all live conductors (positive and negative) is required between the battery system and the inverter.

II. In Australia installations should be conducted in accordance with AS/NZS 3000 and AS/NZS 5139.

4.7. Definition of RJ45 Port Pin

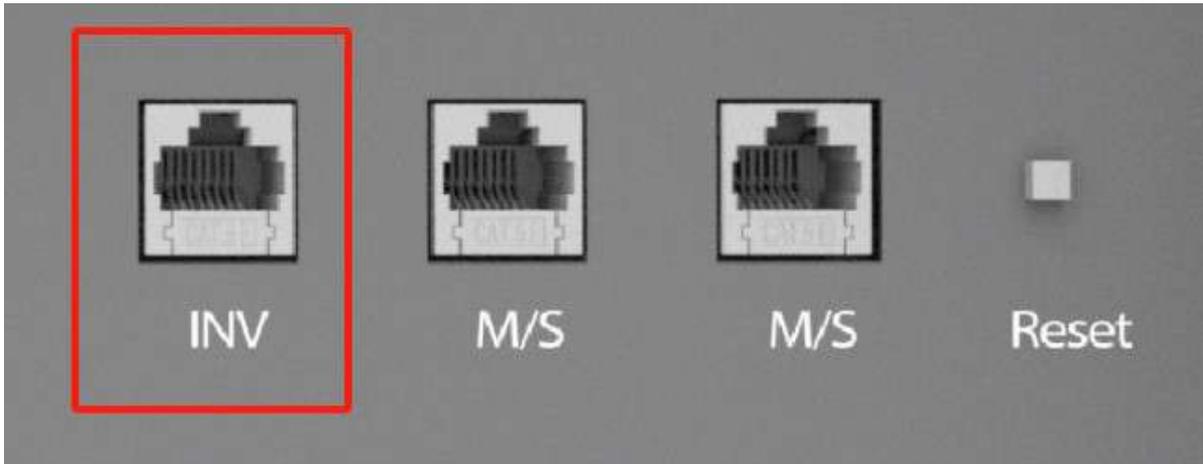


NOTICE

The PowerCool-WLL010A1 battery is designed to support both CAN and RS485 communication with the inverter. Please verify the communication mode of the inverter and select the corresponding mode of the battery.

Definition of RJ45 Port Pin

PIN Number	Definition
1	NC
2	NC
3	NC
4	CAN-H
5	CAN-L
6	GND
7	485A
8	485B

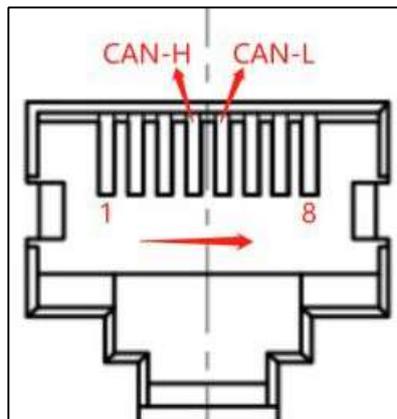

4.8. Power on

- 1) Check all the power cable and communication cable between batteries, and between battery and inverter.
- 2) Check the DIP setting for each battery.
- 3) Switch ON the disconnection device between battery and inverter if available.
- 4) Short press for 1 sec the master power switch, and then all the battery LED light(green) will be on, and buzzers of both master and slave batteries will ring at the same time.



Fault●		The indicator is on when third-level alarm (SOC alarm excluded) is triggered. See assistance from local distributor;			
RUN●		1) Standby: blink slowly for every 500ms;			
		2) Charging: ON;			
		3) Discharge: blink quickly for every 100ms ;			
SOC indicator		L4	L3	L2	L1
		●	●	●	●
SOC (%)	0%~25%	OFF	OFF	OFF	ON
	26%~50%	OFF	OFF	ON	ON
	51%~75%	OFF	ON	ON	ON
	76%~100%	ON	ON	ON	ON

4.9. Power off

Press and hold for 4 secs the master battery power switch till the buzzer rings, and all the battery LED light will be off slowly.

4.10. Maintenance

Annual Inspection

Ever year after installation. The connection of power connectors, grounding points, power cables and screws are to be checked. Make sure there is no loosening, fracture or corrosion at any connection point. Check the installation environment such as dust, water, insect etc. and make sure it is suitable for IP20 batter system.

5. APP configuration and commissioning

5.1. Download our APP

APP for iOS: Open up the APP Store, type in ' PowerCool' in the Search tab to search and download.

APP for Android: Open up the Google Play, type in 'PowerCool' in the Search tab to search and download.

5.2. Login page

5.2.1.The main functions of this pages include language switching, password retrieval, registration, login, viewing service agreement and privacy agreement.

5.2.2.Click 'Register' and go to this page to select identity



Fig. 5.2.1

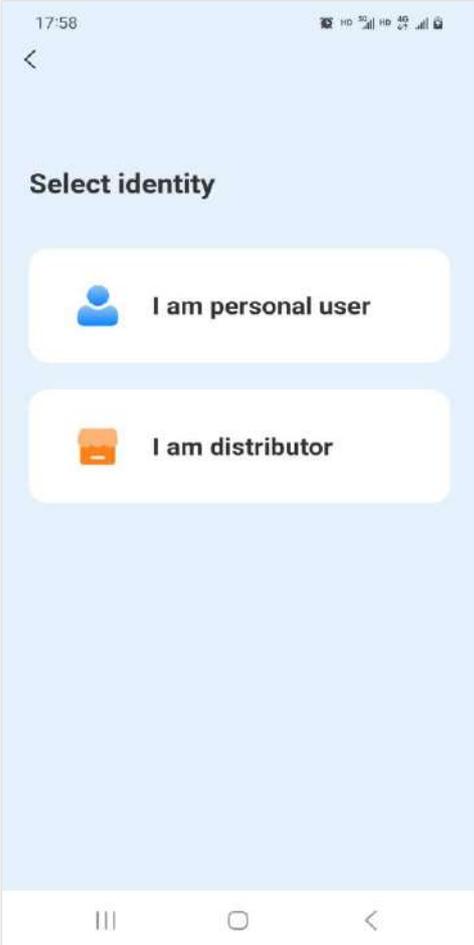


Fig. 5.2.2

5.2.3.Go to this page after selecting identity, insert the email address to be signed in and

click 'Next step'.

5.2.4. Click 'get a verification code' and retrieve it from the mailbox. Insert the verification code received on this page, set the password, check 'I agree' and click 'Enter'.

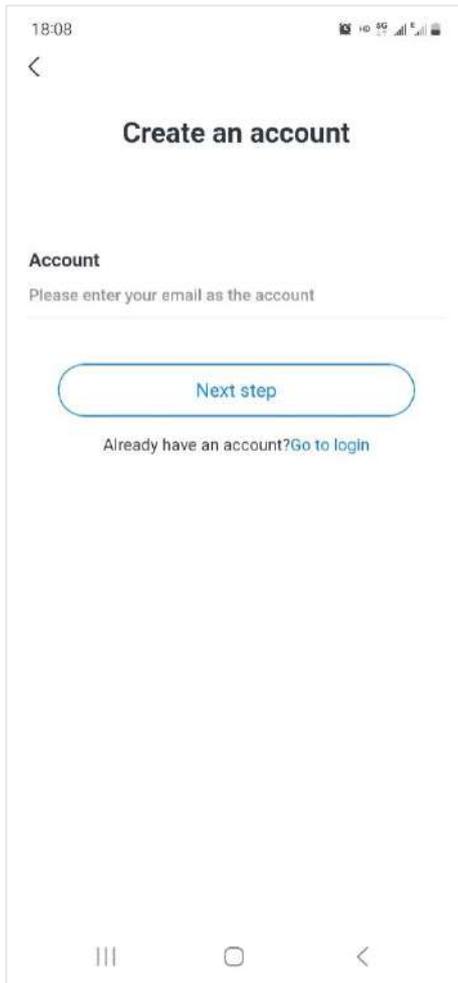


Fig. 5.2.3

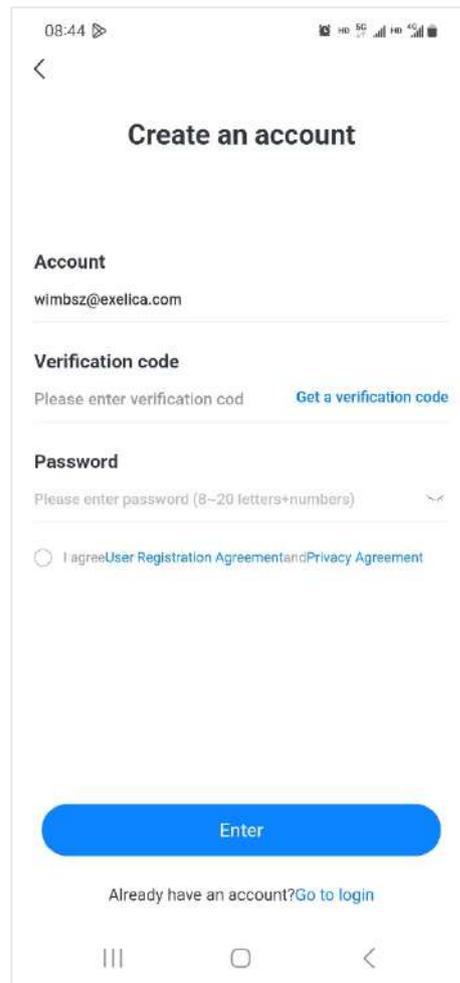


Fig. 5.2.4

5.2.5. Click 'Service Agreement' or 'Privacy Agreement', you may view the details of such agreement.

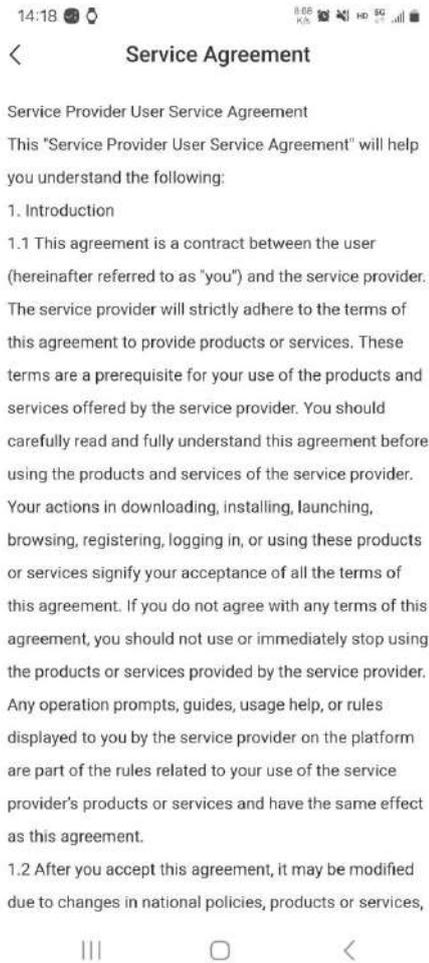


Fig. 5.2.5-1



Fig. 5.2.5-2

5.2.6. Click to switch language

5.2.7. Click ‘Retrieve the password’ and go to this page, you may insert the account number, obtain a verification code via email, input the verification code and click ‘Next step’ .

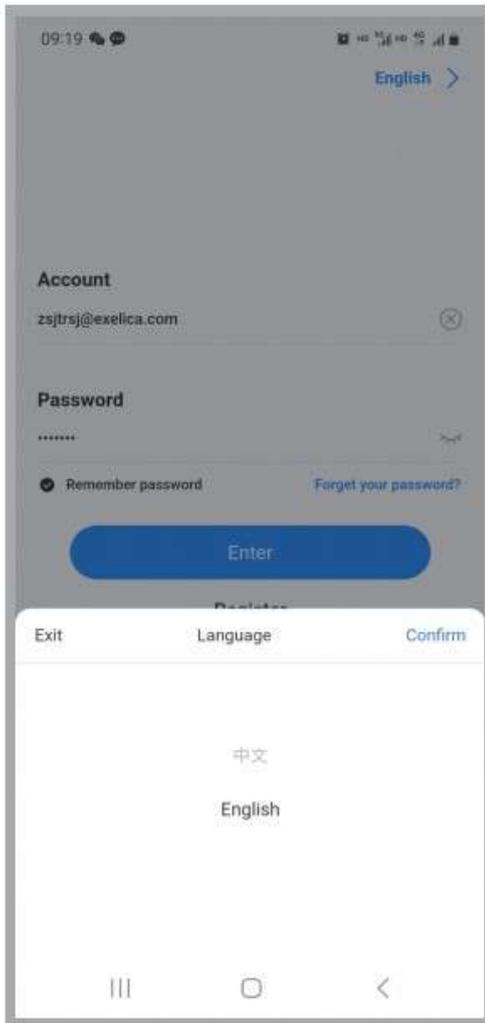


Fig. 5.2.6

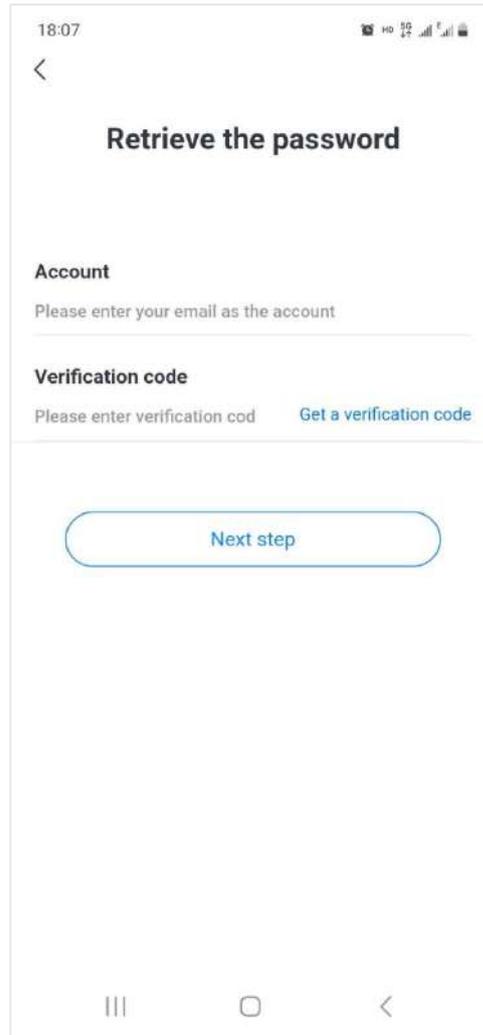


Fig. 5.2.7

5.2.8. On this page, you can reset password by inserting the new password twice, and then click and go to the front page.

5.3. Viewing installed units and adding new units

5.3.1. The picture demonstrates a distributor's account. It shows such figures as the number of devices installed, total installed capacity, newly increased clients this month and total number of clients.

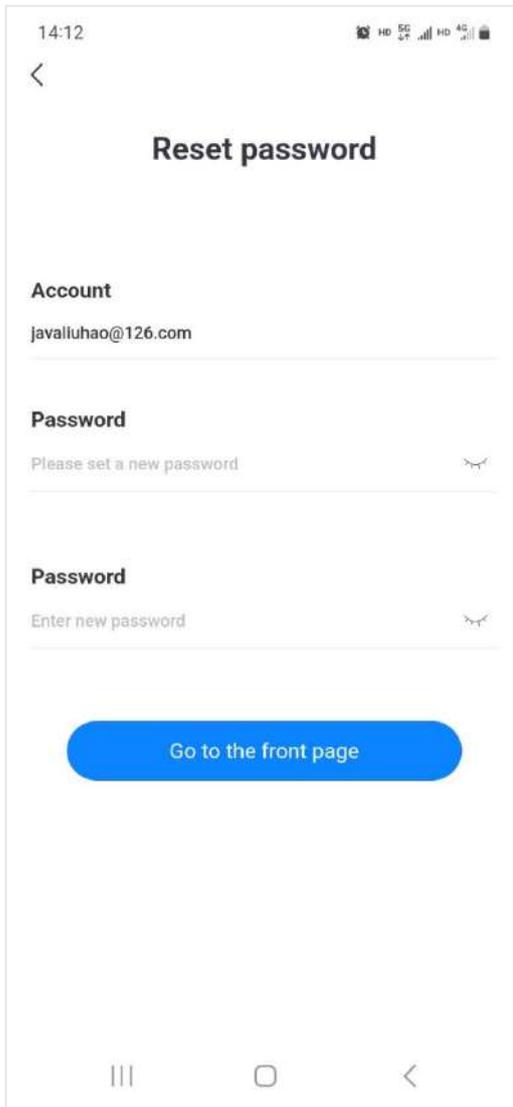


Fig. 5.2.8

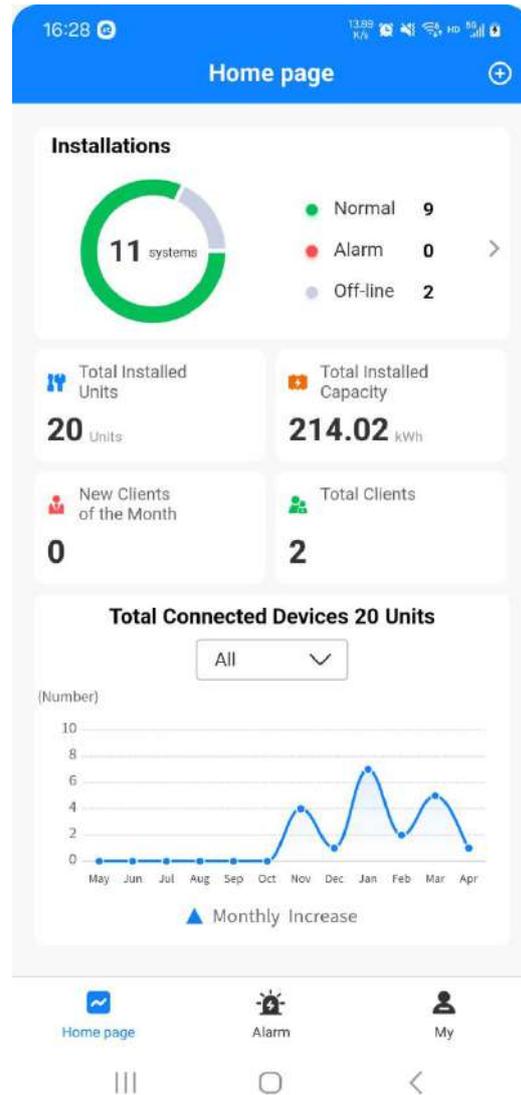


Fig. 5.3.1

5.3.2. Click ‘Installations’ on the front page, you can view the systems you created. You may search by system name, email or address.

5.3.3. On the ‘system list’ page, you may add new systems by clicking ‘+’ button. Then fill in information as instructed and save.

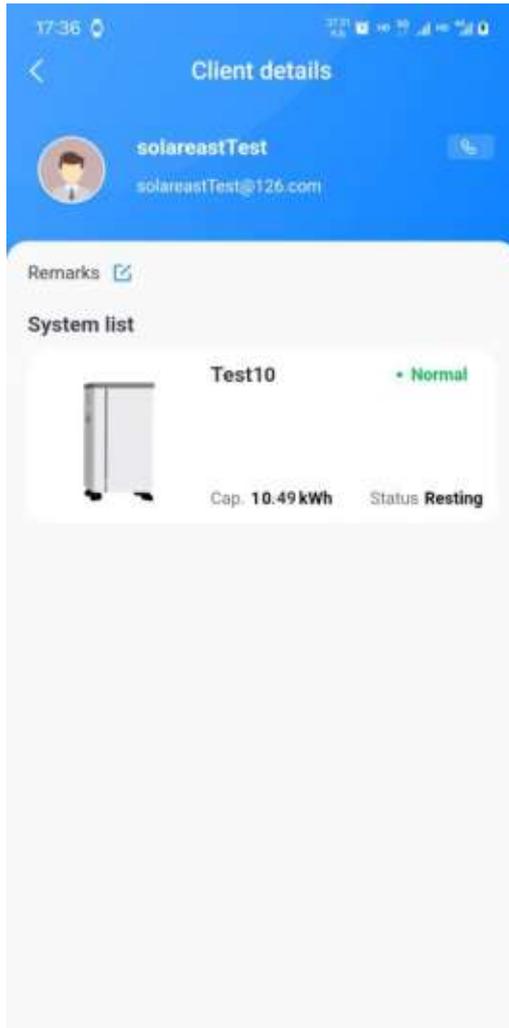


Fig. 5.3.2

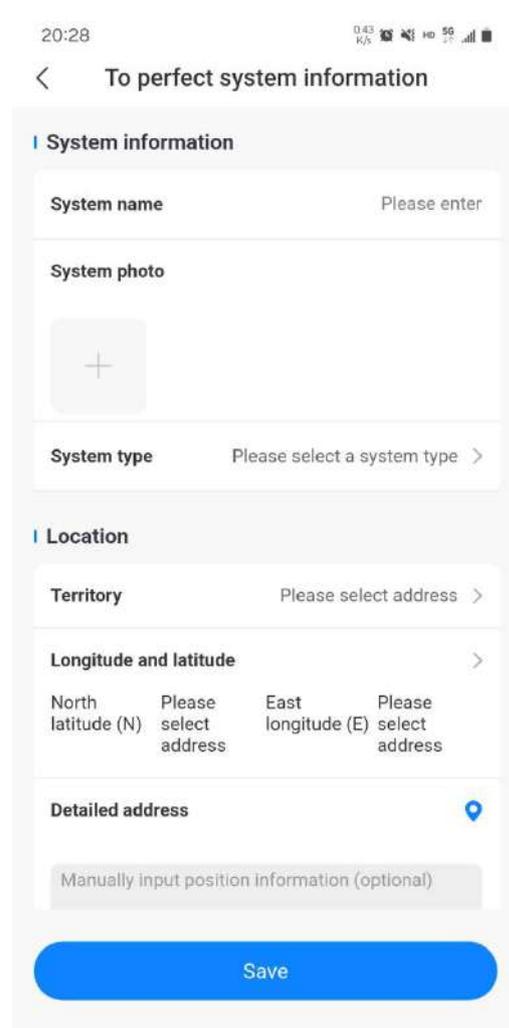


Fig. 5.3.3

5.3.4. Click any item on the system list, you will go to the ‘System information’ page, where you may view and edit system information.

5.3.5. Click ‘Battery device’ on the ‘System information’ page and go to ‘Battery list’, where you may add device and view battery information.

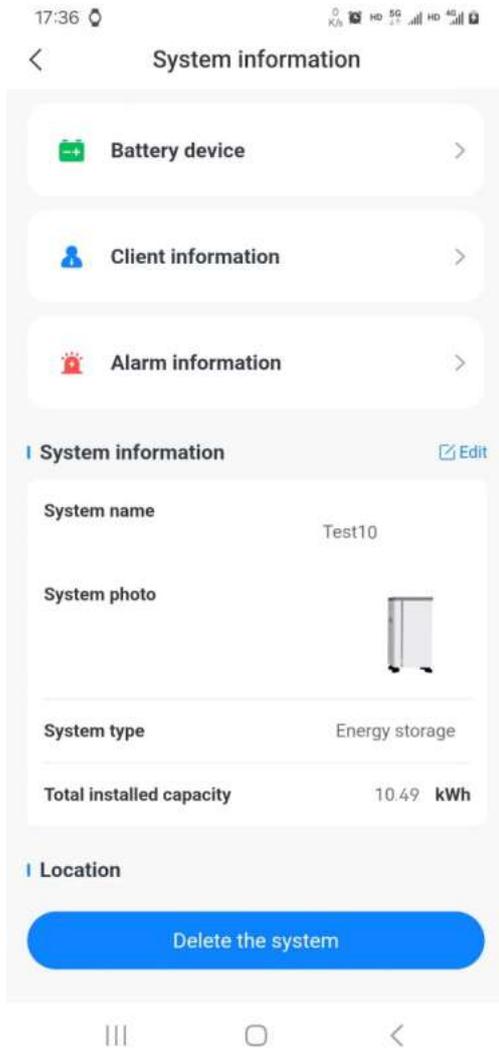


Fig. 5.3.4

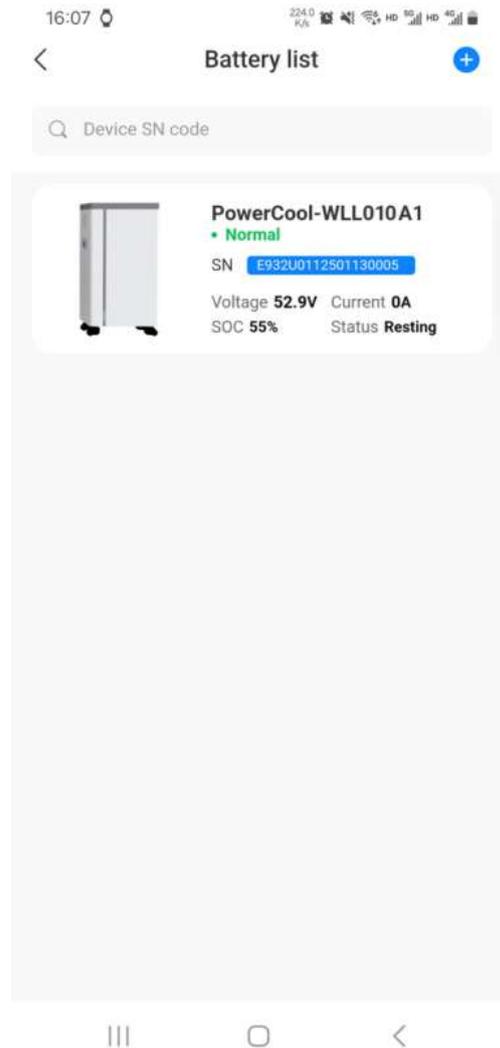


Fig. 5.3.5

5.3.6. Click ‘+’ on the ‘Battery list’ page and then you may add a new device by scanning its tag code.

5.3.7. Find our label code on the side of the device and scan it.



Fig. 5.3.6

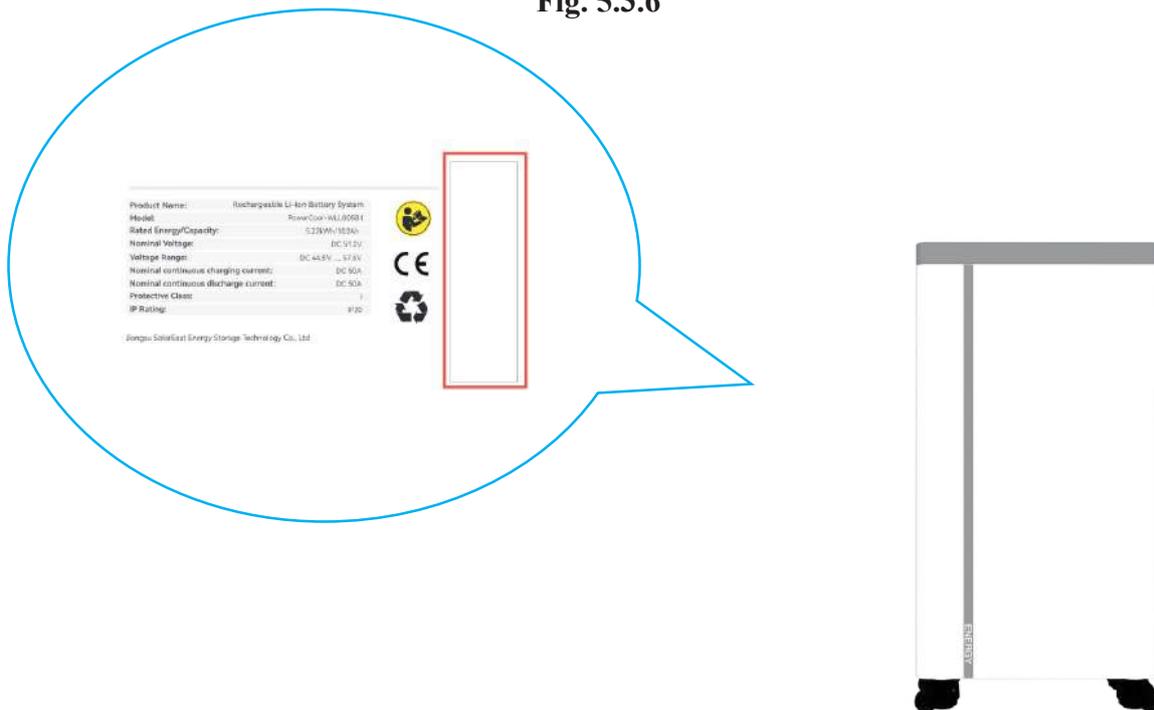


Fig. 5.3.7

5.3.8. Scan tag code and go to ‘Add device’ page, and then click ‘Wireless connection’ for WIFI configuration. And can click on "How to Add a Device" to view the step-by-step instructions for adding a device.

5.3.9. Select “I have read the tutorial” and go to next steps.

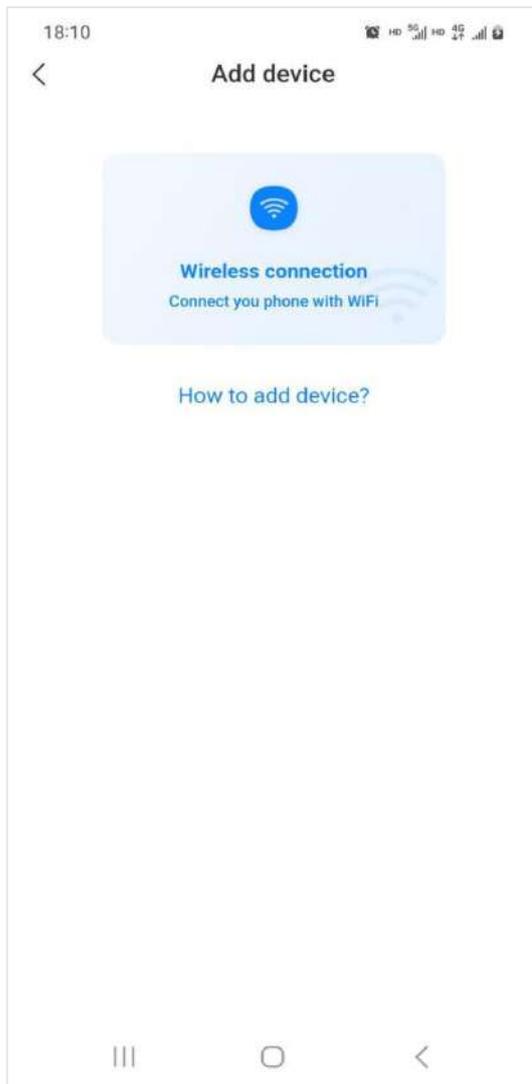


Fig. 5.3.8

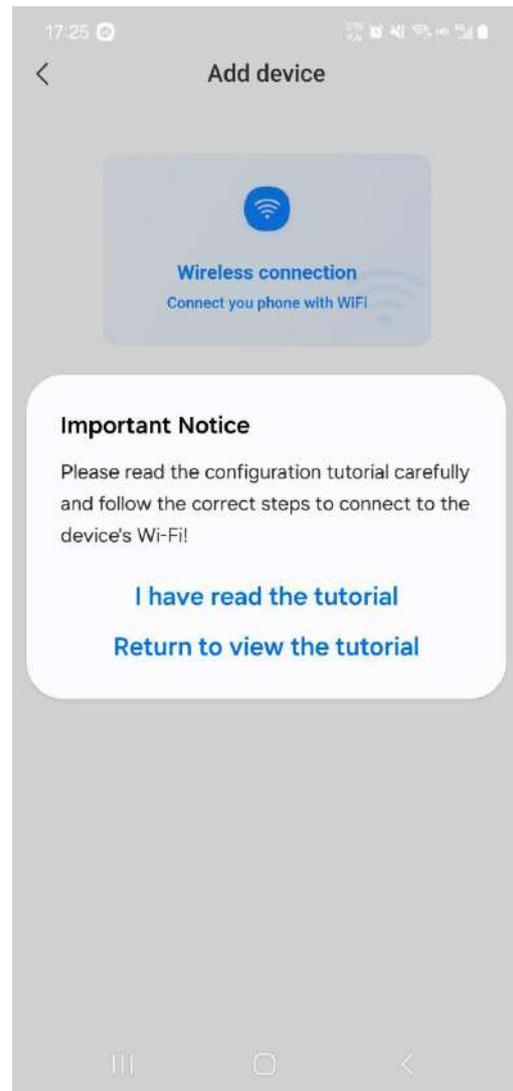


Fig. 5.3.9

5.3.10. Pop-up window shows that phone WiFi is not turned on. Click “Yes” .

5.3.11. Turn on WLAN on the pop-up window and click “Done” right away.

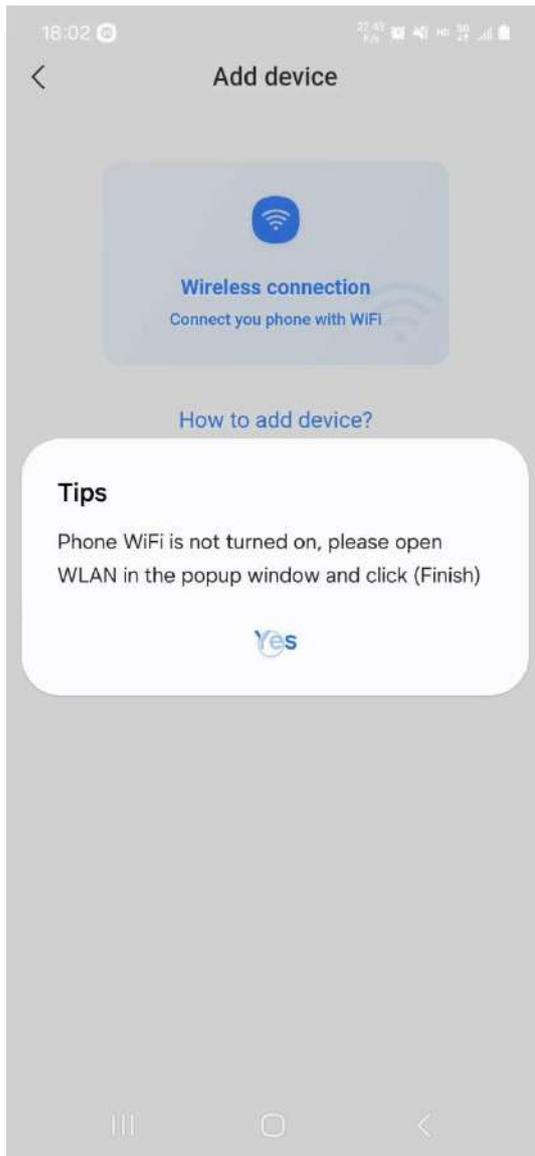


Fig. 5.3.10

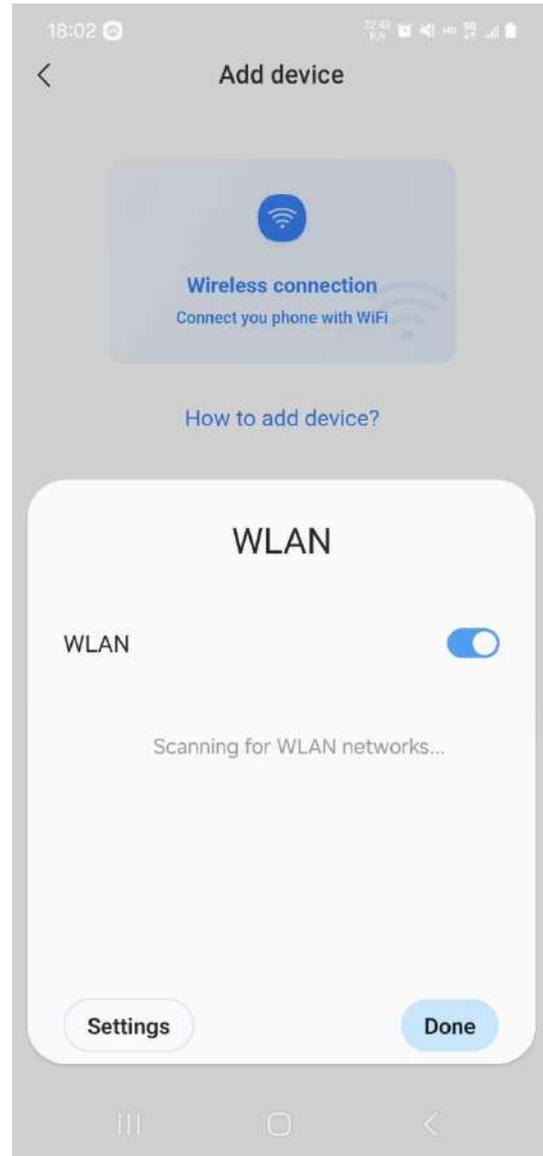


Fig. 5.3.11

5.3.12. Click to connect the device and wait for successful connection. After successful connection, it will go to the WiFi login page.

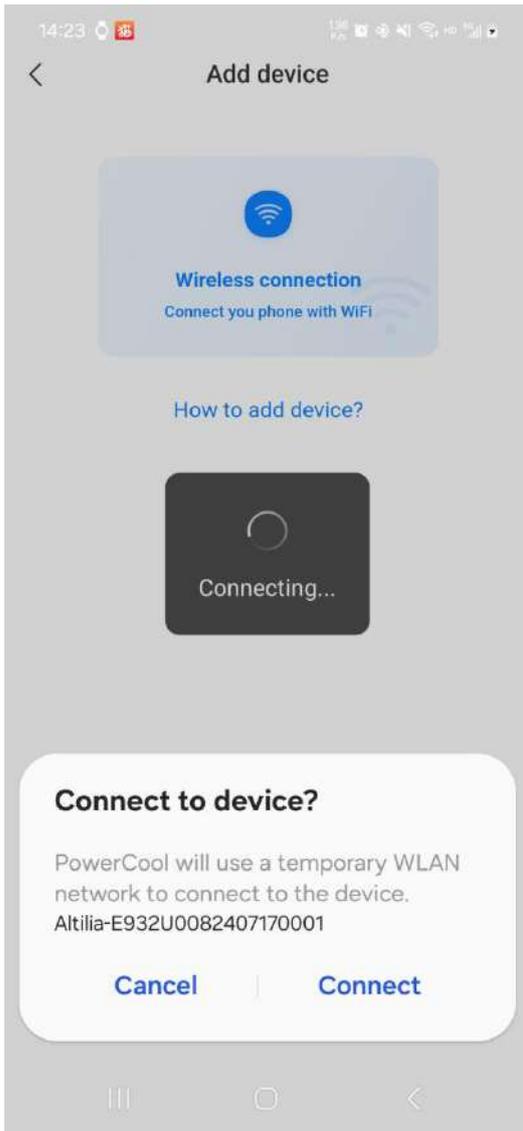


Fig. 5.3.12-1

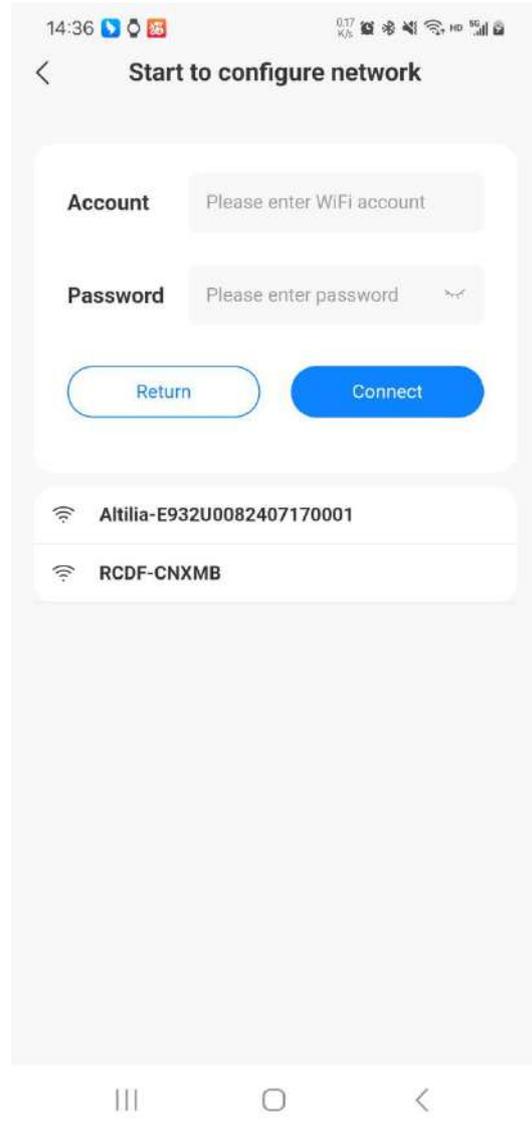


Fig. 5.3.12-2

5.3.13. Insert account and password, click “Connect” for automatic configuration and binding.

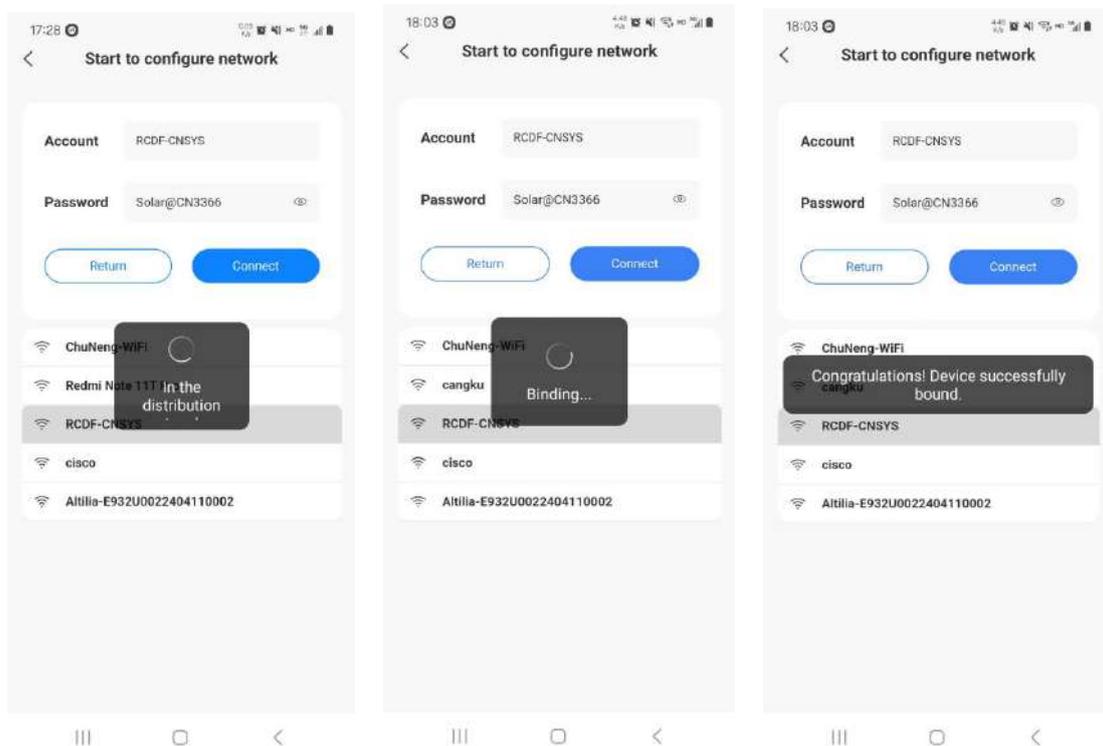


Fig. 5.3.13

5.4. Viewing details of installed devices

5.4.1. Click any item on the battery list you will go to the device details page, where you can view such data as battery SOC, battery temperature, voltage, power, current, operating information, cell monitoring, alarm data and statistics.

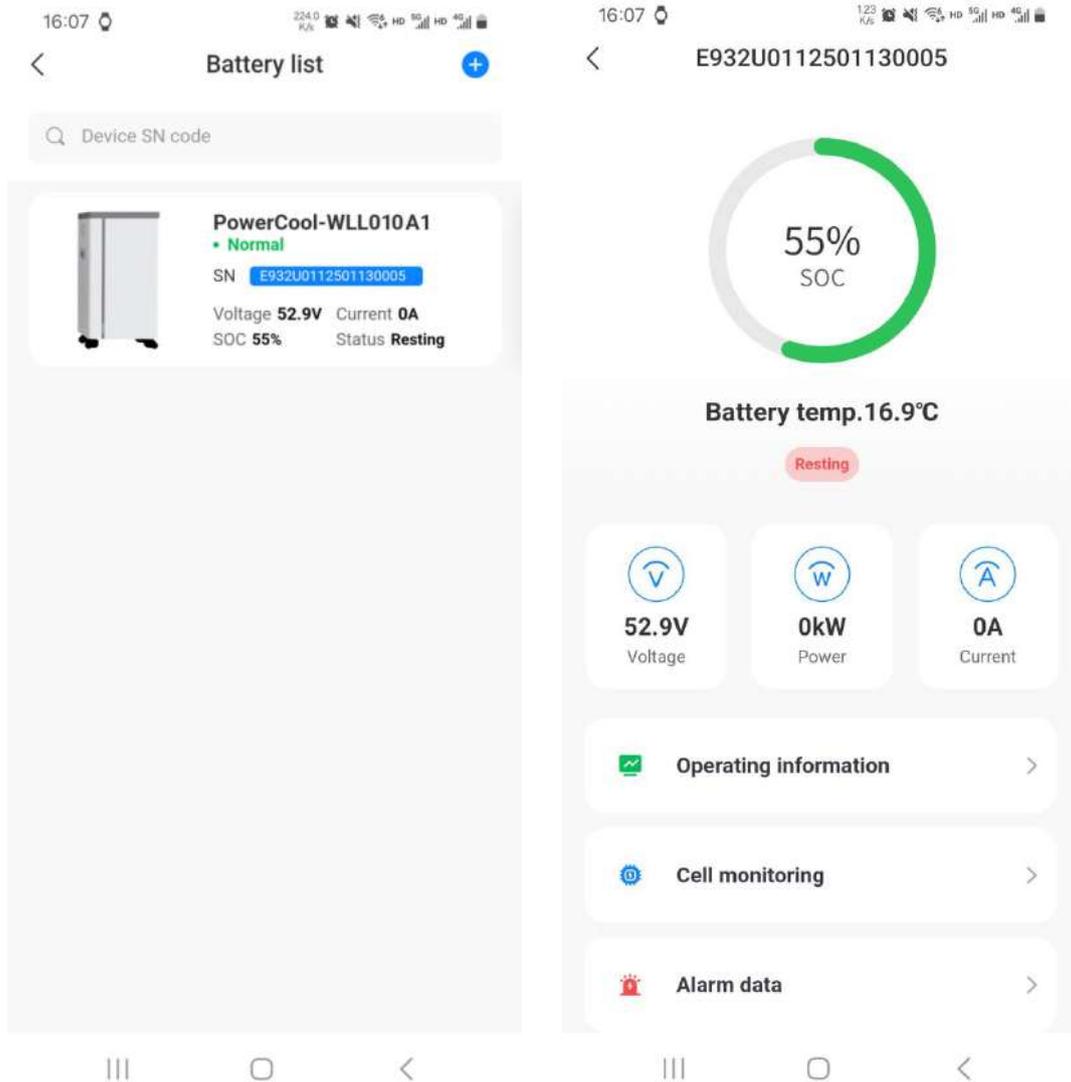


Fig. 5.4.1

5.4.2. You may check the operating information of the device and view the upgrade protocol.

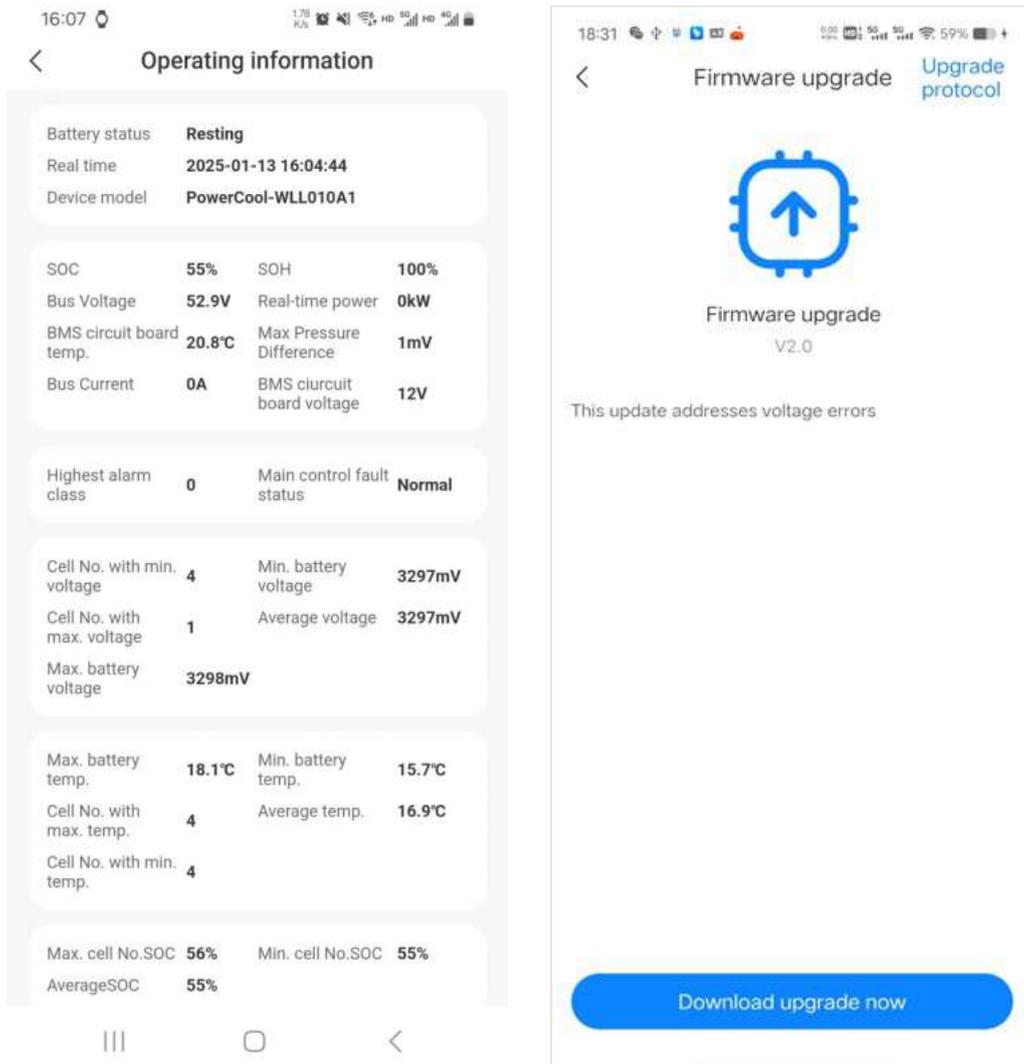


Fig. 5.4.2

5.4.3.View ' alarm data '

5.4.4.View cell running data

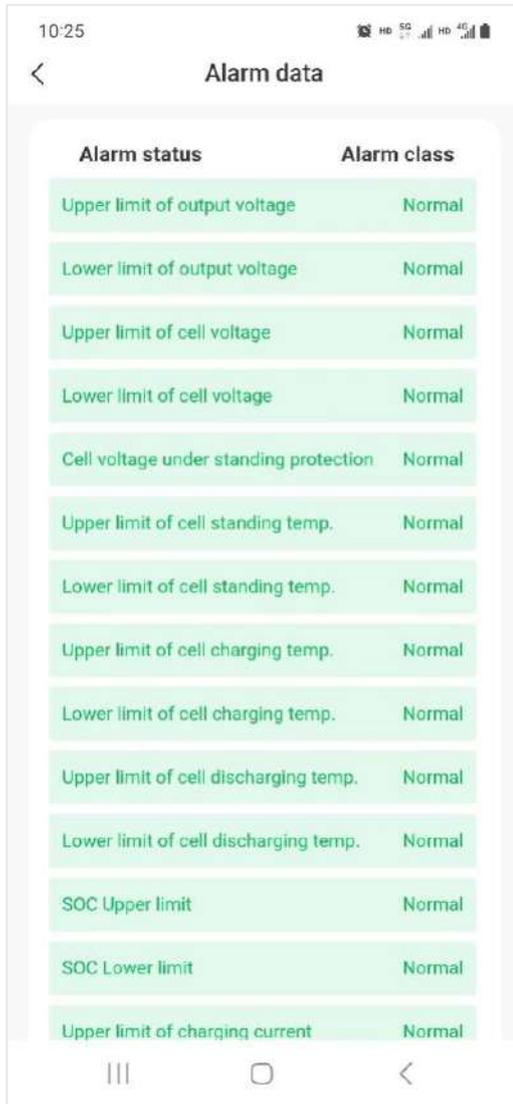


Fig. 5.4.3



Fig. 5.4.4

5.4.5. Power usage tracking function. You may view the statistic data of charging/discharging capacity in the time span of Day/Month/Year.

5.4.6. View alarm list and alarm description.



Fig. 5.4.5

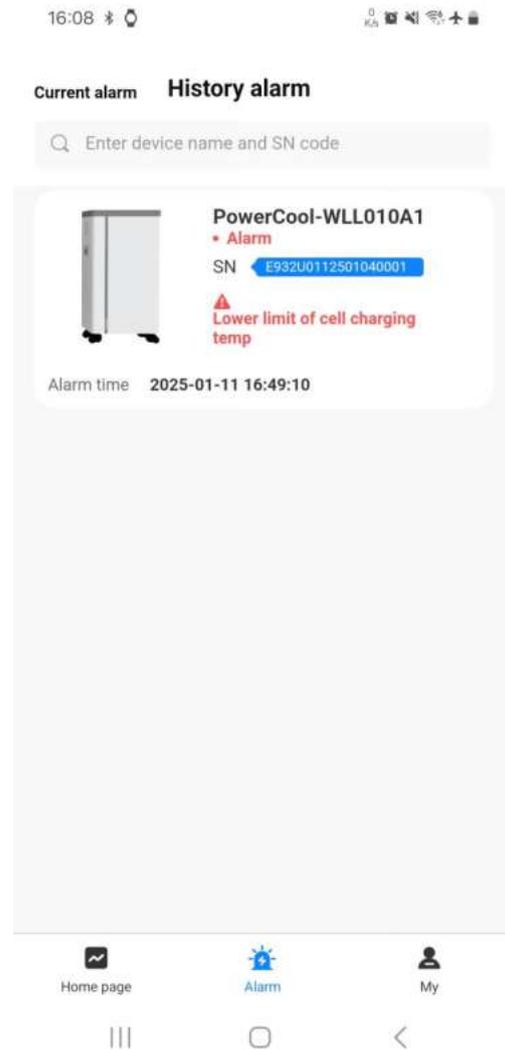


Fig. 5.4.6

5.5. 'My' page features

5.5.1. 'My' page features the following functions: checking personal information, viewing messages, viewing installers, viewing clients, switching language, switching temperature unit, submitting feedback and setting the system. 'My service' mainly include viewing FAQ, operation manual, APP version information and supplier's information.

5.5.2. You are allowed to change avatar, name and contact on 'Account settings' page.

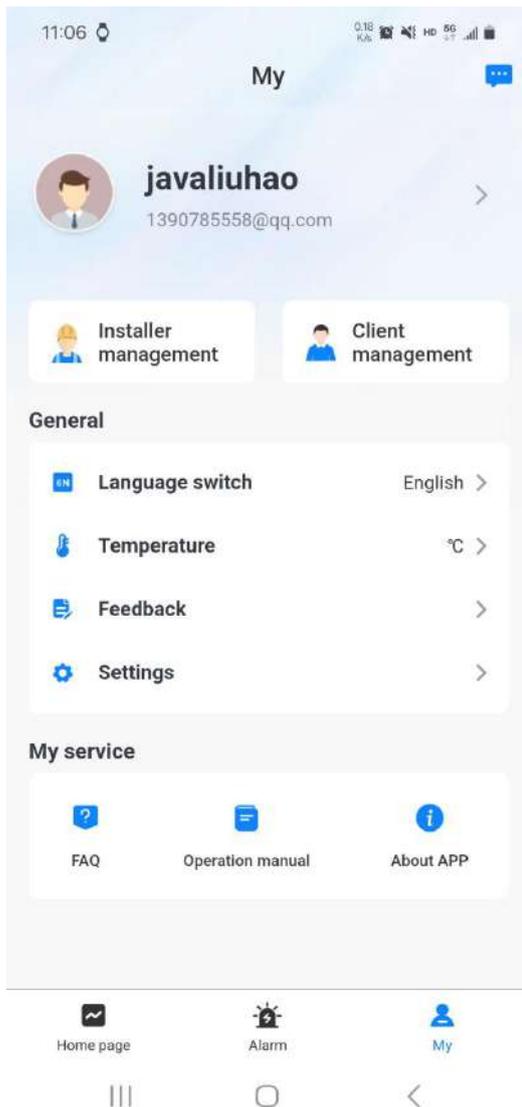


Fig. 5.5.1

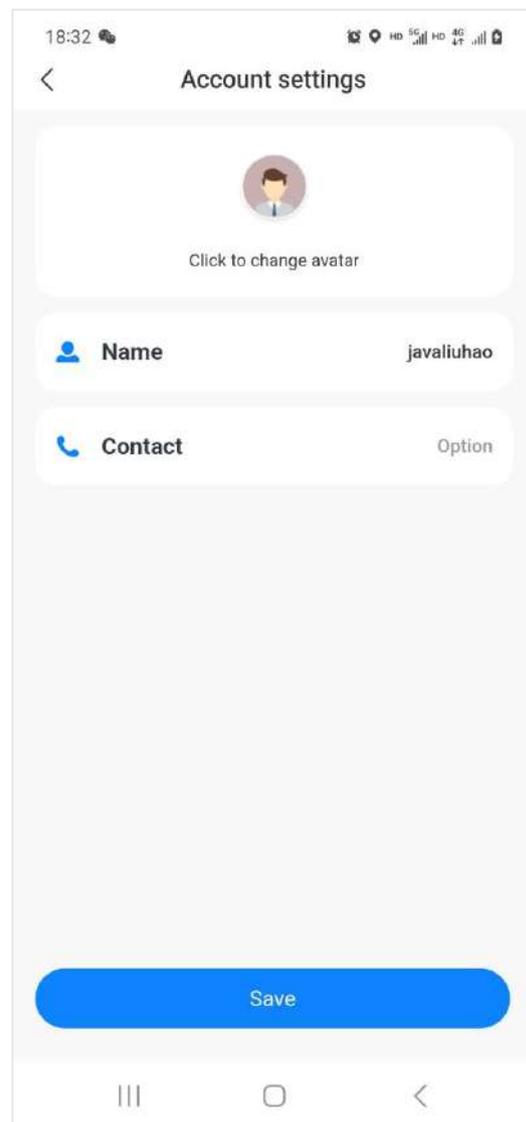


Fig. 5.5.2

5.5.3. On 'Installer management' page, you may view installers under your name. Click each installer to view the details.

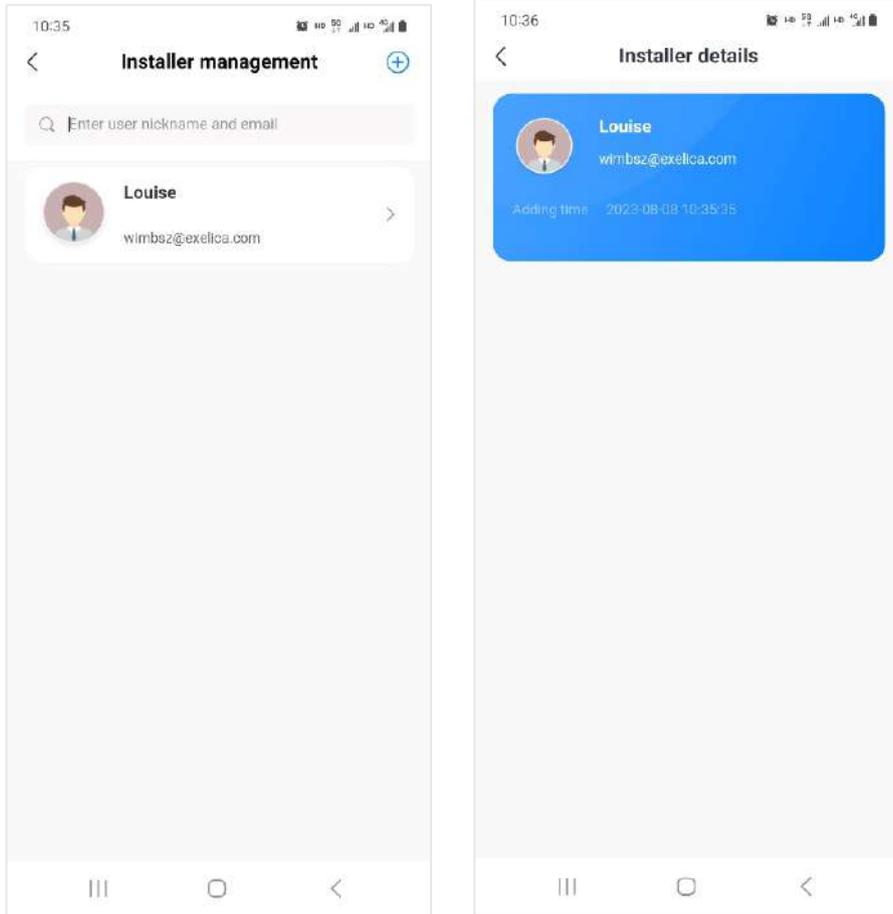


Fig. 5.5.3

5.5.4. You may view client details by clicking 'Client management'. By clicking the system list, you may view the system information.

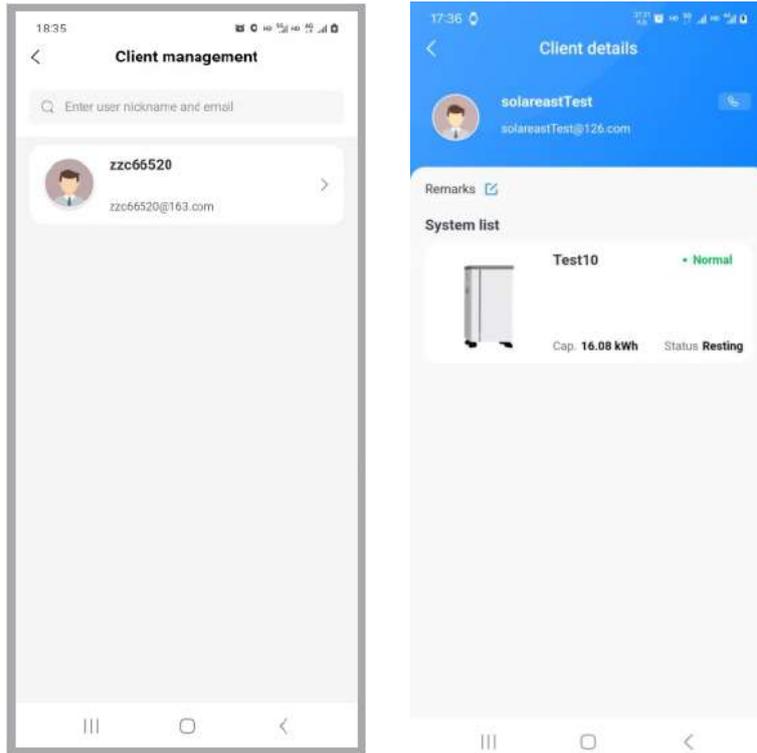


Fig. 5.5.4

5.5.5. Language and temperature unit switching

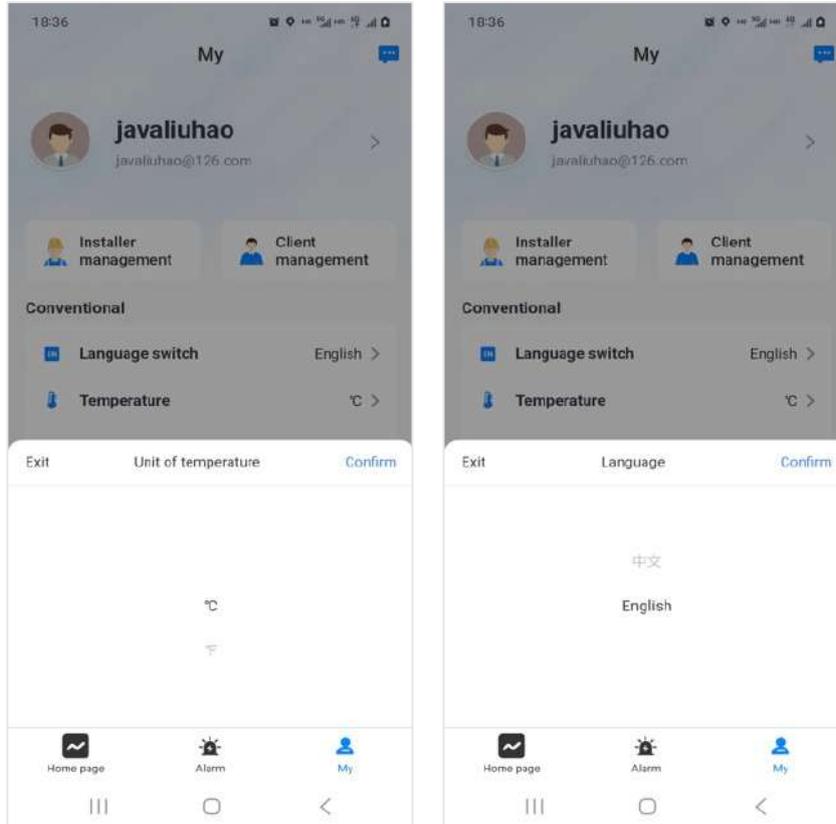


Fig. 5.5.5

5.5.6. On this page you may report problems encountered and view historical feedback.

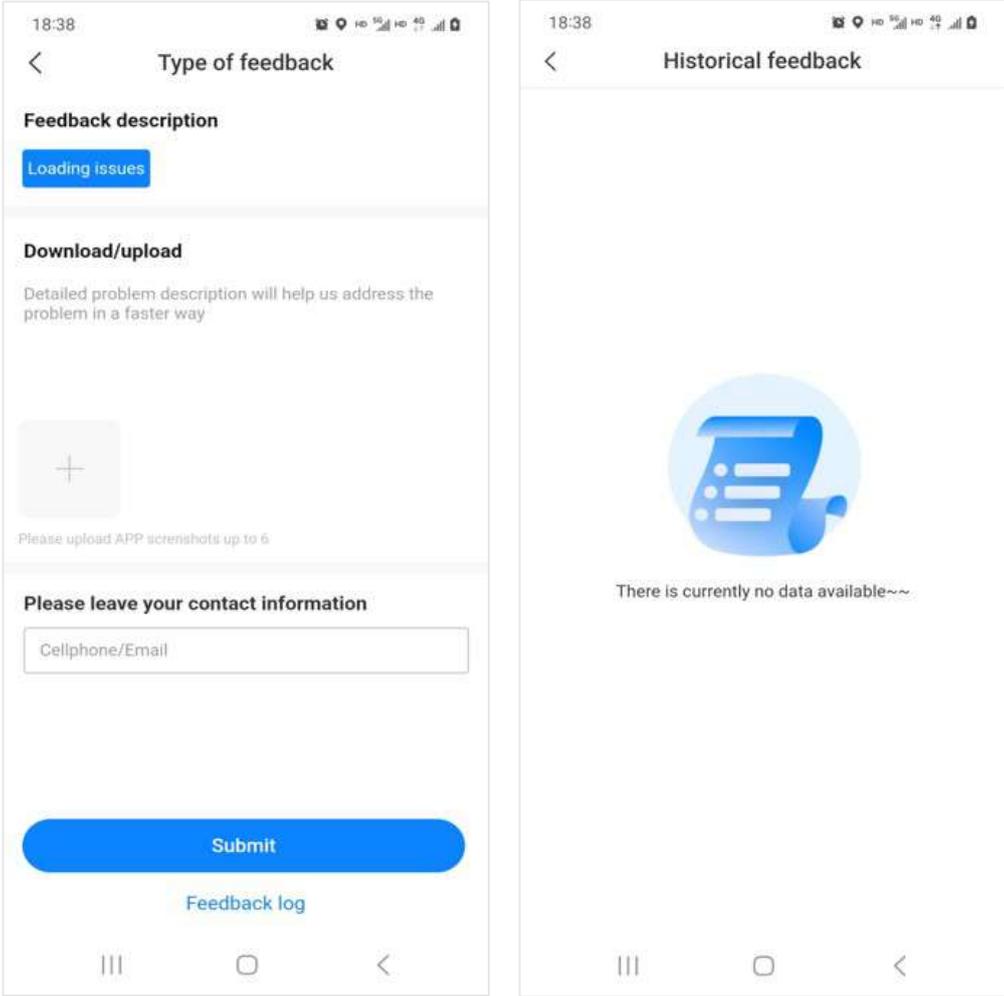


Fig. 5.5.6

5.5.7. On 'FAQ' page you may view the list of common alarm problems. Click any item to view details.

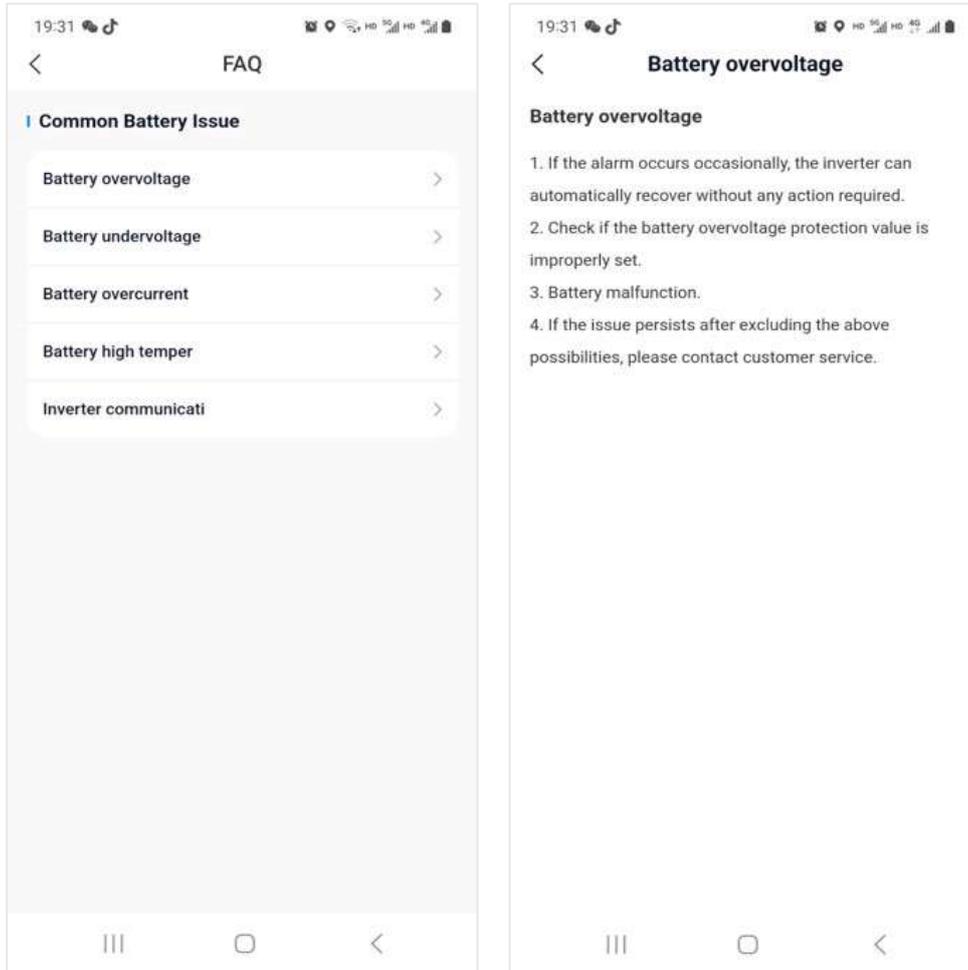


Fig. 5.5.7

5.5.8.View APP version details.

5.5.9.On this page, you may change password or email address. You may also view list of shared information, log off, view service agreement and privacy agreement, clear cache and cookies, and log out.



Fig. 5.5.8

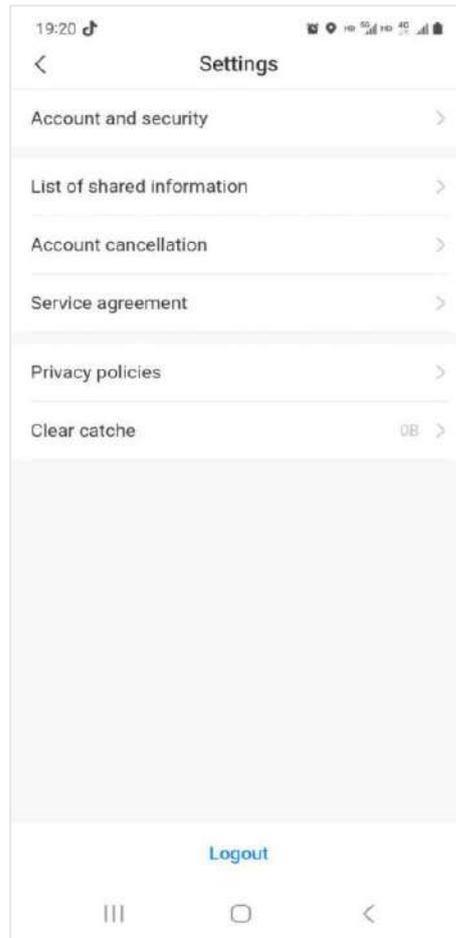


Fig. 5.5.9

5.5.10. On 'Account and security' page, you may change password and email address.

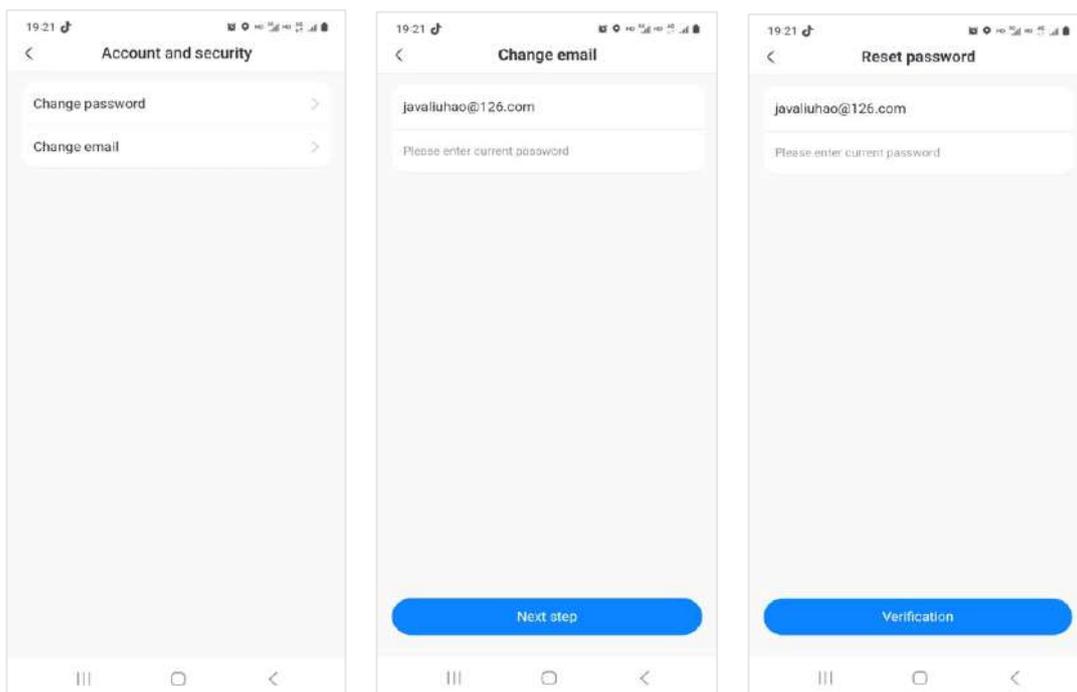


Fig. 5.5.10

5.5.11. On account cancellation page, you are allowed to cancel your account.

5.6. Inverter selection

5.6.1. Click "My", enter "Settings" page, click "Inverter selection", and then turn on camera to scan the bar code on the Control Box and enter the configuration page.

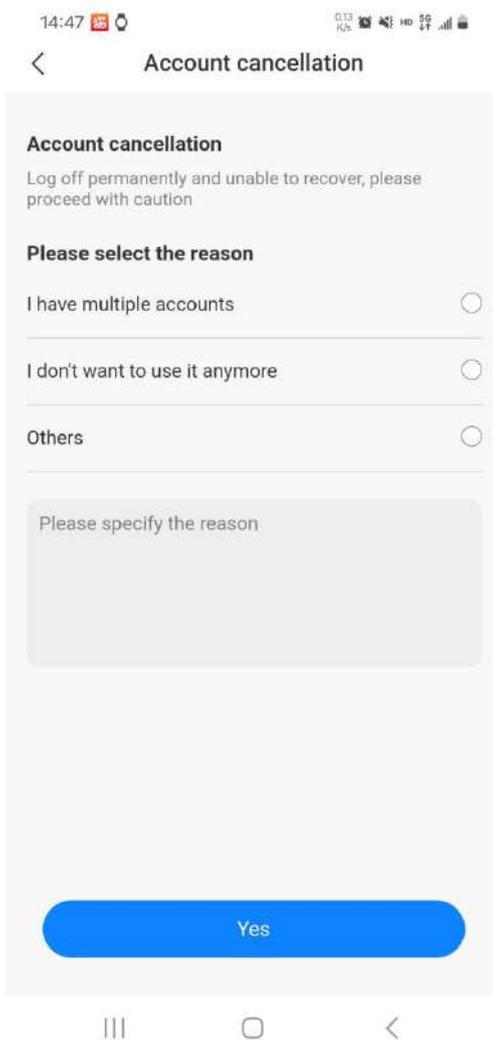


Fig. 5.5.11

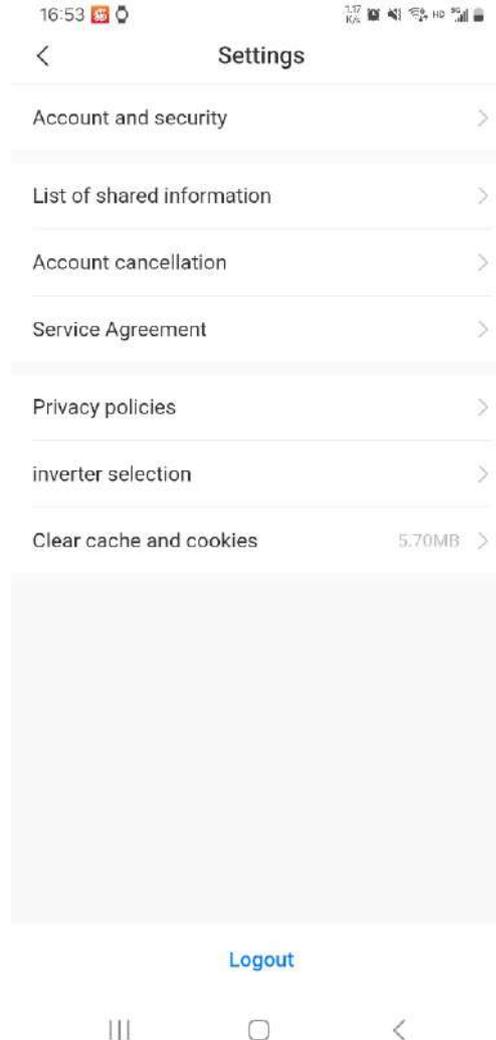


Fig. 5.6.1

5.6.2. Click "connect your phone with WiFi", confirm on the pop-up window that you've read the tutorial and then enter the WiFi configuration page, the following procedures are identical to Items 5.3.8~5.3.12.

5.6.3. Select the right model and click "Start configuring" for configuration. After a successful configuration, disconnect the device WiFi.

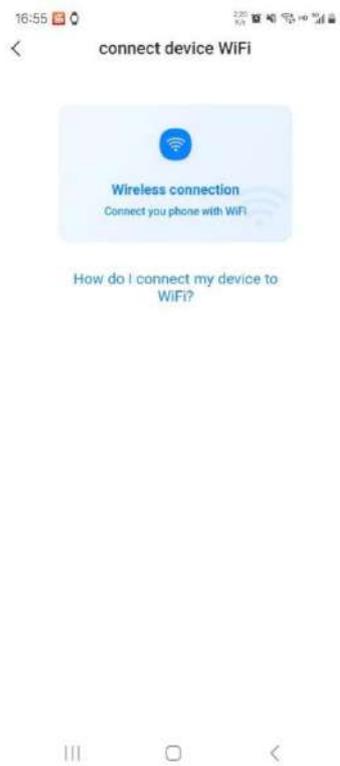


Fig. 5.6.2

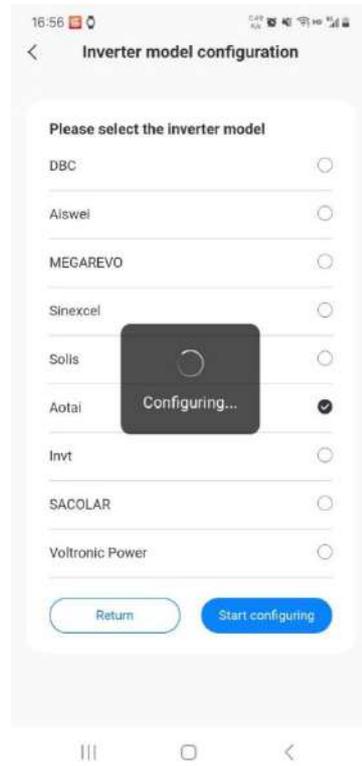
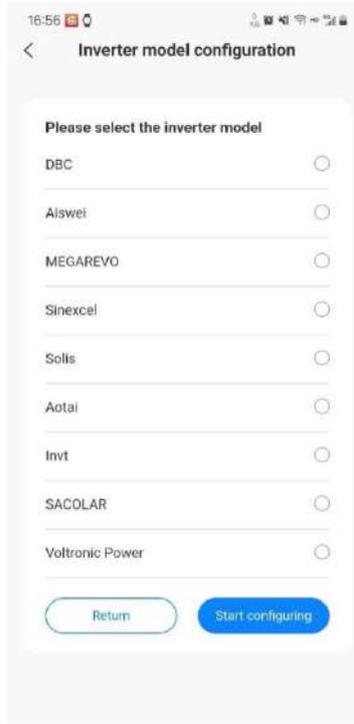


Fig. 5.6.3